



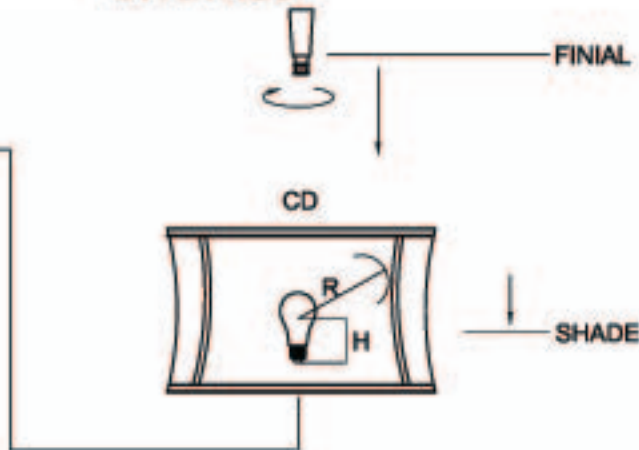

UTTERMOST

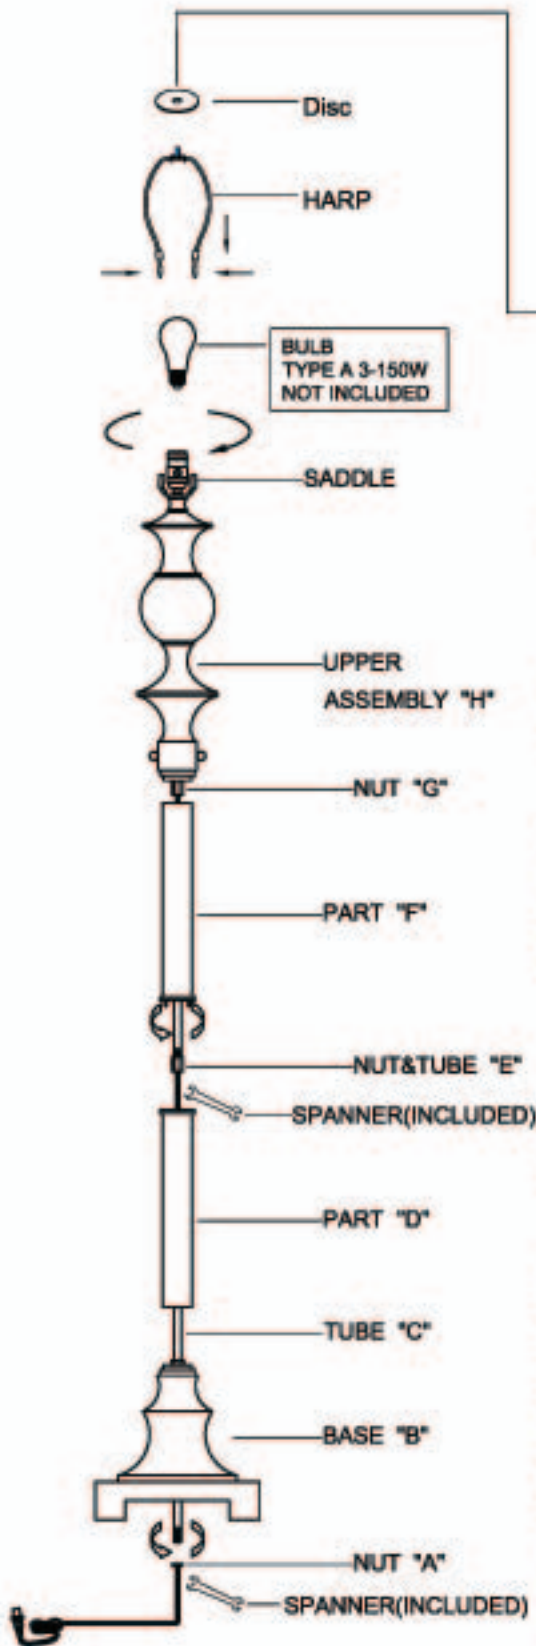

Assembly Instruction STYLE NO:28241-1

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
 2. Place the part (F) to the upper assembly (H) properly.
 3. Screw the nut & tube (E) into the nut (G), then tighten with spanner.
 4. Place the part (D) onto the part (F) properly.
 5. Screw the tube (C) clockwise to the nut & tube (E).
 6. Place the base (B) to the part (D) properly, then screw the nut (A) with spanner till tight.
 7. Attach the harp onto the saddle as drawing.
 8. Install the bulb into the socket.
 9. Place the finial disc and shade onto the harp, then screw the finial clockwise onto harp until shade is secure.
- CAUTION: IN ACCORDANCE WITH THE UL REGULATION. THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUAL TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3-1/4"**
- TO clean, wipe with soft dry cloth.
- NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY