



UTTERMOST

MODEL: 28456

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

UNPACK THE LAMP

TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE. YOU SHOULD HAVE RECEIVED THE FOLLOWING: FINIAL, SHADE, HARP, PRE-WIRED COLUMN, (3) POLES AND BASE.

ASSEMBLE THE LAMP


1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH, FLAT SURFACE. LINE UP ALL PARTS ACCORDING TO THE ASSEMBLY DIAGRAM.
2. PLACE THE BASE IN AN UPRIGHT POSITION ON THE FLOOR.
3. THREAD LOWER POLE INTO BASE AND TURN CLOCKWISE TO TIGHTEN SECURELY.
4. THREAD MIDDLE POLE ONTO LOWER POLE AND TURN CLOCKWISE TO TIGHTEN SECURELY.
5. THREAD UPPER POLE ONTO MIDDLE POLE AND TURN CLOCKWISE TO TIGHTEN SECURELY.
6. THREAD COLUMN ONTO UPPER POLE AND TURN CLOCKWISE TO TIGHTEN SECURELY.
7. SQUEEZE LEGS OF HARP TOGETHER AND INSERT THE TWO ENDS BETWEEN THE PRONGS OF THE HARP HOLDER.
8. PLACE SHADE AND FINIAL DISK ON TOP OF HARP AND SECURE WITH FINIAL.
9. INSTALL A 150 WATT MAX. TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.
10. PLUG POWER CORD INTO A WALL OUTLET AND TURN ON THE SWITCH.

TROUBLE SHOOTING

1. IF YOUR LAMP DOES NOT LIGHT, CHECK PLUG AT THE WALL OUTLET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.
2. IF LAMP STILL DOES NOT LIGHT, UNPLUG FROM OUTLET. CHECK THE BULB FOR A BROKEN FILAMENT, REPLACE BULB IF NECESSARY. PLUG IN LAMP AND TURN IT ON.
3. IF THE LAMP STILL DOES NOT LIGHT, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

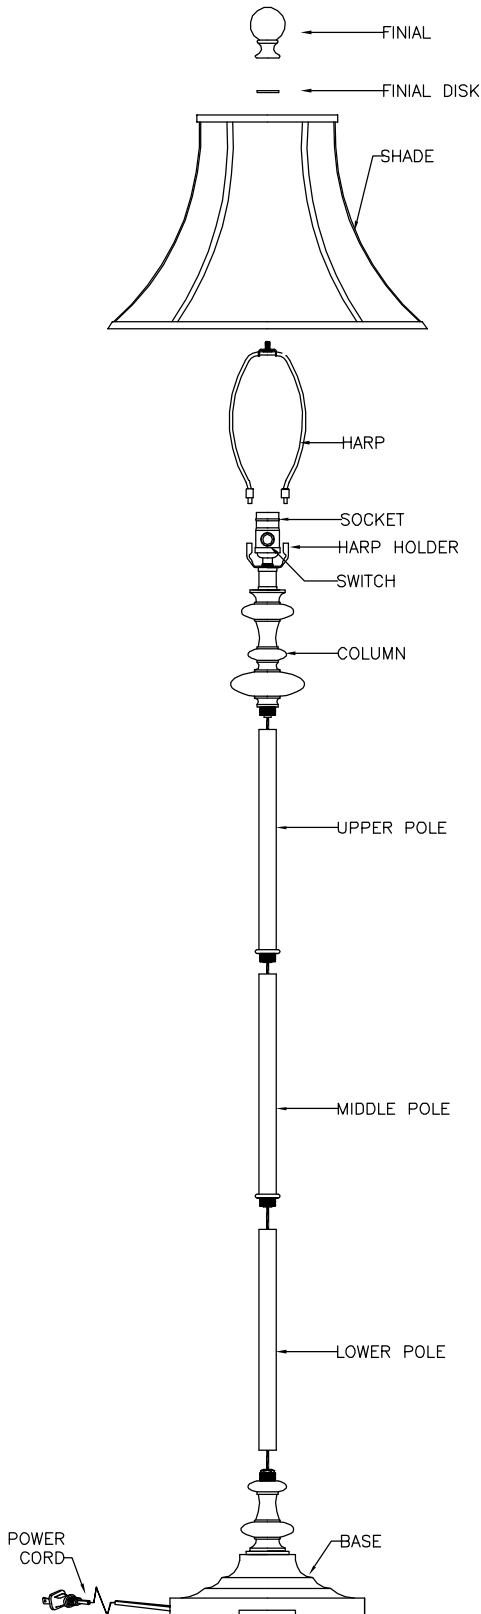

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com