



UTTERMOST

MODEL: 28460

ASSEMBLY INSTRUCTIONS

READ AND SAVE THESE INSTRUCTIONS

UNPACK THE LAMP

TO PROTECT THE FINISH, PLACE ALL PARTS ON A SOFT SURFACE. YOU SHOULD HAVE RECEIVED THE FOLLOWING: FINIAL, FINIAL DISK, SHADE, HARP, BIG BALL SCREW AND LAMP BODY.

ASSEMBLE THE LAMP

1. CAREFULLY UNPACK AND PLACE ALL PARTS ON A SMOOTH, FLAT SURFACE. LINE UP ALL PARTS ACCORDING TO THE ASSEMBLY DIAGRAM.
2. PLACE THE LAMP BODY IN AN UPRIGHT POSITION ON THE FLOOR.

3. RAISE PLATE OVER NIPPLE AND SECURE WITH BIG BALL SCREW AS SHOWN.

4. TIGHTEN THE SMALL BALL SCREWS.

5. SQUEEZE LEGS OF HARP TOGETHER AND INSERT THE TWO ENDS BETWEEN THE PRONGS OF THE HARP HOLDER.

6. PLACE SHADE AND FINIAL DISK ON TOP OF HARP AND SECURE WITH FINIAL.

7. INSTALL A 150 WATT MAX. TYPE "A" BULB (NOT INCLUDED) INTO SOCKET.

8. PLUG POWER CORD INTO A WALL OUTLET AND TURN ON THE SWITCH.

TROUBLE SHOOTING

1. IF YOUR LAMP DOES NOT LIGHT, CHECK PLUG AT THE WALL OUTLET. MAKE SURE THE PLUG IS FULLY AND PROPERLY INSERTED INTO THE WALL OUTLET.

2. IF LAMP STILL DOES NOT LIGHT, UNPLUG FROM OUTLET. CHECK THE BULB FOR A BROKEN FILAMENT, REPLACE BULB IF NECESSARY. PLUG IN LAMP AND TURN IT ON.

3. IF THE LAMP STILL DOES NOT LIGHT, PLEASE CONTACT YOUR DISTRIBUTOR OR PLACE OF PURCHASE.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

