




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: **28635-1**

Careful unpack all lamp parts from the carton.

1. Take the lamp carefully out of the Carton,
and place the **Base(Part A)** on a flat surface.
2. Thread the **Part B** onto the **Base(Part A)**
and turn clockwise to tighten secure.
3. Thread the **Part C** onto the **Part B** and turn clockwise
to tighten secure.
4. Thread the **Part D** onto the **Part C** and turn clockwise
to tighten secure.
5. Place the **Harp** onto the **Harp Base**
and place the **Shade** on the **Harp**
6. Then thread the **Finial** onto the **Harp**.
7. Put the **1 x 150W** Bulb (not included) onto the lamp
before connecting the plug to the electricity outlet Box.

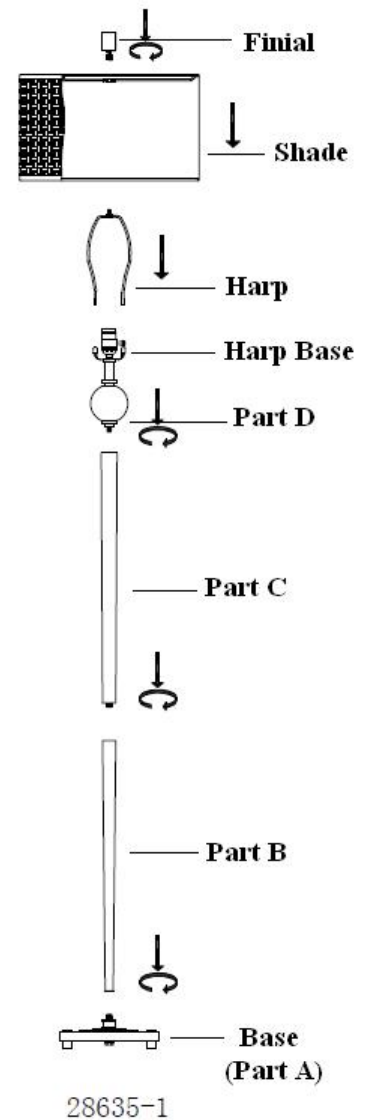

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.