



## UTTERMOST ASSEMBLY INSTRUCTIONS


**ITEM#: 28723**

### PARTS LIST:

**A. Finial B. Shade C. Harp D. Harp Base E. Top carving  
F. Top column G. Middle column H. Base I. Wrench**

**\*\*Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

- 1. Place All the parts in a soft position on the floor.**
- 2. Rotate the Middle column(G) into the base(H), pull the cord make sure it does not get damaged.**
- 3. Rotate Top column(F) into the Middle column(G), pull the cord; Rotate Top carving(E) into the Top column (F), pull the cord. Make sure all the columns are straight, then tighten all the parts.**
- 4. Use Wrench(I) to loose the Nut at the bottom of the Base(H), Adjust the Base(H), make sure Point (a) and Point (b) are at the same direction, Then Tighten the Nut By Wrench(I).**
- 5. Put the harp(C) into the harp base(D), and then put the shade(B) onto the harp(C).**
- 6. Put the finial(A) onto the harp and turn clockwise to tight securely.**
- 7. Use 3-Way 150W bulb(not included).**

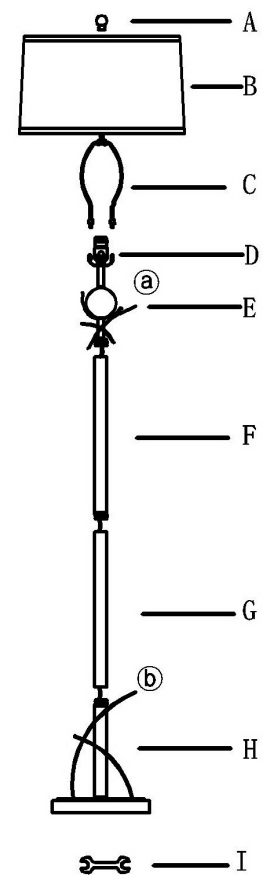

### IMPORTANT SAFETY INSTRUCTIONS

**This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. reverse the plug, If it still does not fit, Contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted .Do not attempt to defeat this safety feature.**

PO BOX 558/3325 GRASSY HILL RD ROCKY MOUNT VIRGINIA 24151

[www.uttermost.com](http://www.uttermost.com)