




UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 29207-1

Careful unpack all lamp parts from the carton.

1. Place the base in an upright position on the floor
2. Position the **Socket** through the hole on the bottom of the Shade. Thread the **Socket Collar** onto the Socket to secure them. Hand tighten until snug.
3. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage. (Not Included)

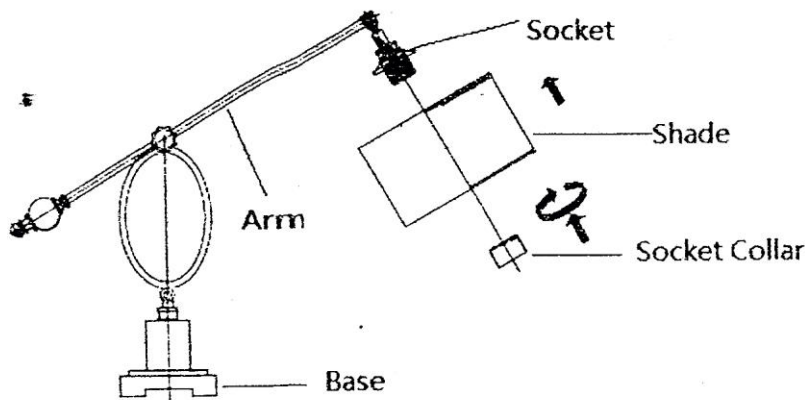

29207-1

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.