



UTTERMOST ASSEMBLY INSTRUCTIONS


ITEM#: 29565-1

PARTS LIST:

A. Thread Ring B. Support Pipe C. Plastic Washer D. Glass
E. Plastic Washer F. Socket G. Line Switch

**Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.

1. Place All the parts in a soft position on the floor.
2. Put E(Plastic Washer) through F(Socket), Put D(Glass) through F(Socket), Make sure the D(Glass) in the center. Then Put C(Plastic Washer), B(Support Pipe) through the F(Socket).
3. Rotate A(Thread Ring) to tighten them.
4. Use 1x100W, T10 bulb(not included).
5. Rotate the G(Line Switch) to control the light on and off.

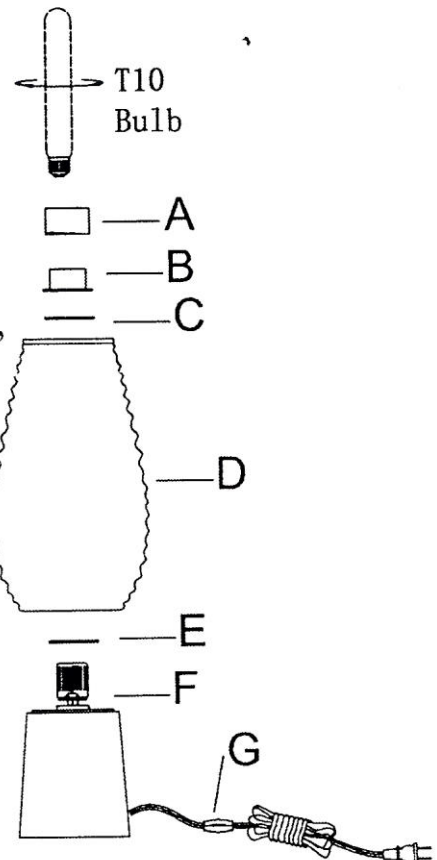

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. reverse the plug, If it still does not fit, Contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted .Do not attempt to defeat this safety feature.