

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

 
ITEM#:30102

### PARTS LIST:

A. Finial B. Shade C. Harp D. Harp Base E. Upper Column F. Tooth Tube G. Lower Column

**\*\*Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

1. Place the base in a right position on the floor.
2. Pull the cord & make sure it does not get damaged.
3. Ensure the Upper Column (E) is aligned with Lower Column (G), then spinning the Upper Column (E) into the Tooth Tube (F) to tightened.
4. Put the harp (C) into the harp base (D), and then put the shade (B) onto the harp (C).
5. Put the finial (A) onto the harp and turn clockwise to tight securely.
6. Use 3-way 150W bulb (not included).



### IMPORTANT SAFETY INSTRUCTIONS

**This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. Reverse the plug, if it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.**