

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 30158

Carefully unpack all Assembly parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.
2. Insert the **Part A** into the top of the **Base** while pulling excess cord where it exits the **Base**. Attach **Flat Washer** and **Hex Nut** to the threaded rod of **Part A**. The **Flat Washer** and **Hex Nut** are pre-positioned on the cord. Tighten the **Hex Nut** by using **Wrench** enclosed in the parts bag.
3. Place the **Part B** into the top end of the **Part A**. Tighten by using **Round Metal** turning enclosed.
4. Locate the **Harp** by pressing the ends of the Harp into the **Saddle** on the top of **Base**.
5. Place the **Shade** over the top end of the **Harp**. Secure by thread the **Finial** onto the **Harp**. Hand tighten until snug.
6. Install correct Bulbs referring to fixture markings and /or labels for maximum wattage. (Not Included)

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

