
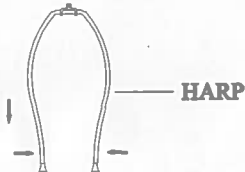


# UTTERMOST

## ASSEMBLY INSTRUCTIONS

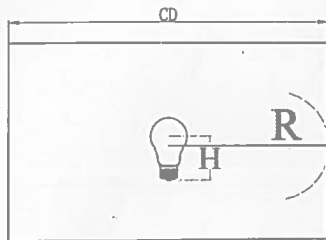


KD

Tube

KD

LAMP BODY B

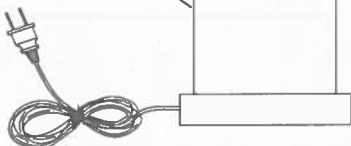

STYLE NO.: 30166-1

1. Take the parts carefully out of carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Screw tube to lamp body B until secure.
3. Screw lamp body A to tube until secure.
4. Attach the harp onto the saddle as drawing shows.
5. Place shade then finial disc on top of harp and secure with finial.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3 1/4".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.