

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

ITEM#:30189

### PARTS LIST:

A. Finial B. Shade C. Harp D.Socket E.Finial Disk

**\*\*Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**


**1.Insert Bulb (not included) into Socket (D).**

**2..Put the harp(C) into the harp base , and then put the shade (B) onto the harp(C).**

**3.Put the finial disk(E) onto the harp with the finial(A) and turn clockwise to tight securely.**

**4.Use 3-way 150W bulb (not included).**

**The birds can be swivel to any directions according to customer demands.**

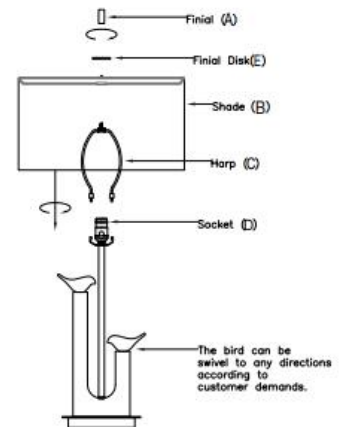

### IMPORTANT SAFETY INSTRUCTIONS

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

**This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. Reverse the plug, if it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.**