


UTTERMOST

ASSEMBLY INSTRUCTIONS

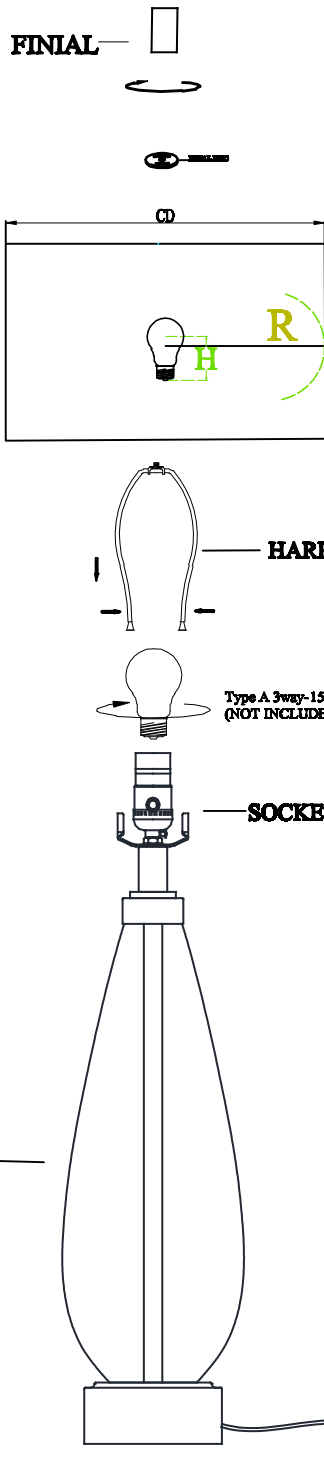

STYLE NO.: 30230

1. Take all parts carefully out of the carton and place on a soft, flat surface to be sure no parts are missing or damaged.
2. Attach the harp onto the saddle as shown in the drawing.
3. Place the shade and finial disc onto the top of the harp. Thread the finial onto the harp to secure the shade.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3 1/4".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.