

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

ITEM#:30357

### PARTS LIST:

A.Finial B. Shade C. Harp D. Bulb E. Harp Base F. Lamp Leg G. U-Shape Slot

H.Thread Rod I. Plastic Washer J. Finial K. Hexagon Screw L. Allen Key

M.Upper Metal Post N(1)Center Post N(2)Center Post O.Lower Metal Post

P.Uttermost Finial Disk

**\*\*Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

1. Place the base in a right position on the floor.
2. Pull the cord & make sure it does not get damaged.
3. Rotate the Upper Metal Post (M) Into the Center Post (N1);
4. Insert the Lamp Leg(F)into the U-Shape Slot(G),ensure the lamp leg(F) holes aligned with the slot hole. Remove the Finial(J) and Plastic Washer(I)from one end of the Thread Rod(H),Thread Rod(H)across the holes, tighten Plastic Washer(I)and Finial(J) .Take out the Allan Key(L)from hardware bag,fix the Hexagon screw(K)to tightened.Ensure lamp stability,or you can use Allan Key(L) to fix other two legs it tightened as Lamp Leg(F);Rotate the Lower Metal Post (O) Into the Center Post (N2).
5. Put the harp(C) into the harp base (E), and then put the shade (B) onto the harp(C).
6. Place Uttermost finial disk(P) onto shade(B),then fasten finial(A) onto harp(C) to fix shade(B).
7. Use 3-way 150W bulb(D) (not included).

### 8. IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. Reverse the plug, if it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

