

UTTERMOST

ASSEMBLY INSTRUCTIONS

ITEM#: 30399

PARTS LIST:

A. Finial B. Shade C. Harp D. Bulb E. Harp Base F. Metal Body G. Threaded Tube

H. Travertine Base I. Washer J. Hexagon Nut

****Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

1. Place the base in a right position on the floor.

2. Pull the cord & make sure it does not get damaged.

3. Let the Threaded Tube (G) through the Travertine Base (H) and Washer (I), ensure the Metal Body (F) is aligned with Threaded Tube (G), then spinning the Metal Body (F) into Metal Body (F) to tighten. Make sure to tighten the Hexagon Nut (J) with a Wrench (K).

4. Put the harp (C) into the harp base (E), and then put the shade (B) onto the harp (C).

5. Put the finial (A) onto the harp and turn clockwise to tight securely.

6. Use 3-way 150W bulb (D) (not included).

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. Reverse the plug, if it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

