

UTTERMOST

ASSEMBLY INSTRUCTIONS

ITEM#: 30452


PARTS LIST:

A	Finial	F	Threaded Tube
B	Shade	G	Marble Base
C	Harp	H	Lock Washer
D	Bulb (Not Included)	I	Butterfly Nut
E	Harp Base		

**** Be sure you have all parts as indicated above before beginning assembly. This lamp should be assembled on a soft, flat surface to prevent scratching the finish during assembly.**

**** Periodic tightening may be required over time.**

1. Place the base in an upright position.
2. Pull the cord through the Marble Base (G) to tighten the lamp body and base together. Take care not to damage the cord.
3. Insert both Threaded Tube (F) into the Marble Base (G). Place one Lock Washer (H) followed by one Butterfly Nut (I) onto each Threaded Tube (F), turn clockwise to tighten securely.
4. Insert the Harp (C) into the Harp Base (E), the two small sleeves will cover the base to secure once the Harp is in place.
5. Remove the Finial (A) from the Harp (C) and place the shade onto the threads, then tighten the Finial back onto the Harp to secure.
6. Use a 3-Way 150W Bulb (D) – NOT INCLUDED. Assembly is complete.

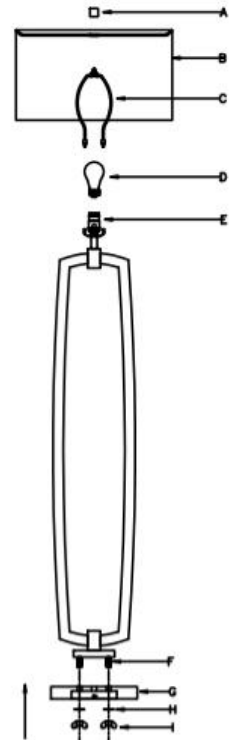

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electrical shock. This plug will fit in a polarized outlet. Reverse the plug, if it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.