


UTTERMOST

ASSEMBLY INSTRUCTIONS

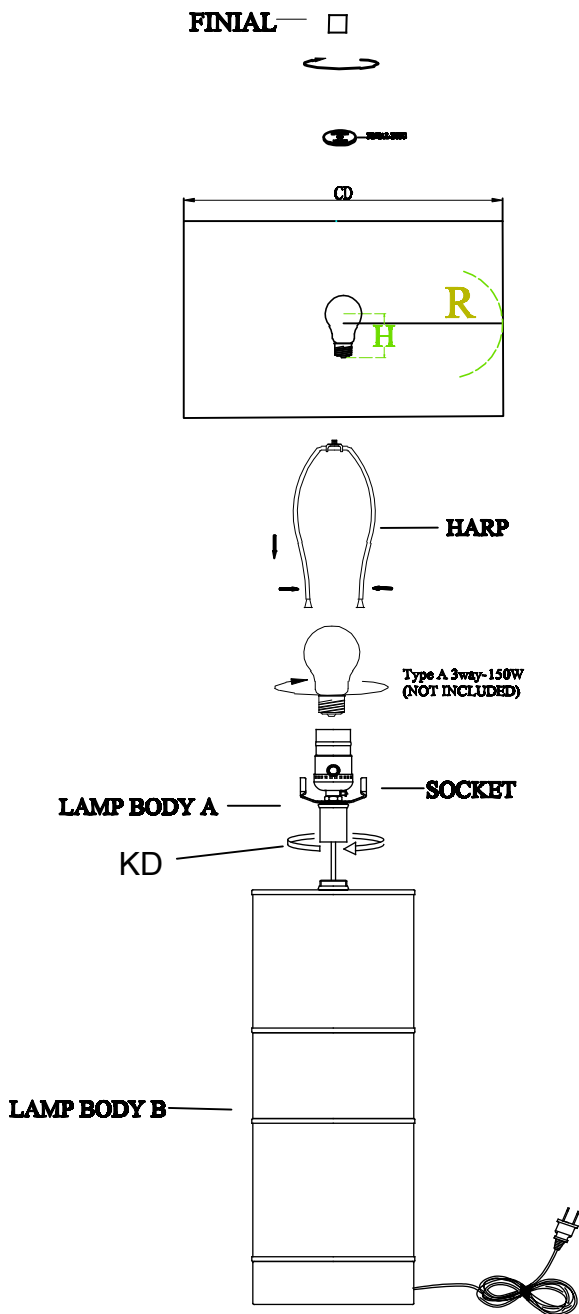

STYLE NO.: 30472

1. Take the parts carefully out of the carton and place them on a flat surface to be sure no parts will be damaged.
2. Screw LAMP BODY (A) onto LAMP BODY (B) until tight.
3. Attach the HARP onto the saddle as shown in the diagram.
4. Place the shade followed by the finial disk onto the top of the HARP, then tight the FINIAL clockwise until

CAUTION: IN ACCORDANCE WITH THE UL REGULATIONS, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM, AND "CD" IS BIGGER THAN OR EQUAL TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3-1/4".

To clean, wipe with a soft dry cloth.

NOTE: THE DIAGRAM OF THE LAMP BODY IS FOR REFERENCE ONLY.