


# UTTERMOST

## ASSEMBLY INSTRUCTIONS

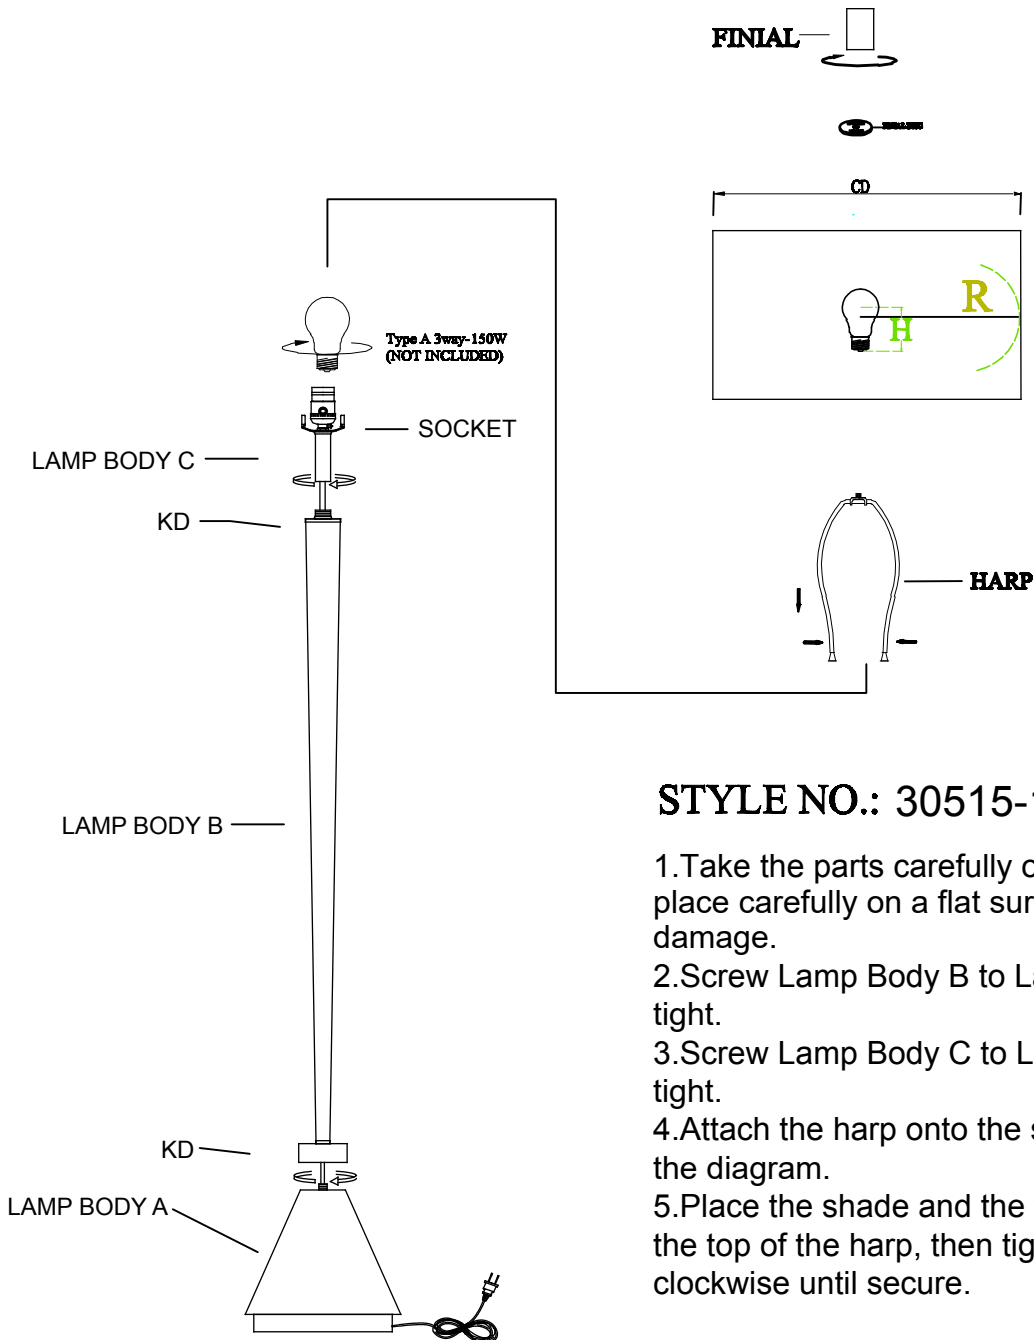

### STYLE NO.: 30515-1

1. Take the parts carefully out of the carton and place carefully on a flat surface to prevent damage.
2. Screw Lamp Body B to Lamp Body A until tight.
3. Screw Lamp Body C to Lamp Body B until tight.
4. Attach the harp onto the saddle as shown in the diagram.
5. Place the shade and the finial disc onto the top of the harp, then tighten the finial clockwise until secure.

**CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3 1/4".**

**To clean, wipe with soft dry cloth.**

**NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.**