

UTTERMOST

ASSEMBLY INSTRUCTIONS

THANK YOU FOR PURCHASING THE FLOOR LAMP .

PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:


ASSEMBLY INSTRUCTIONS:

MODEL NUMBER:30547-1

1. UNPACK ALL PARTS FROM CARTON CAREFULLY;
2. THREAD THE TUBE("B") CLOCKWISE TO THE BASE("A")
- 3.THREAD THE BALL ASEEMBLY("C") CLOCKWISE TO THE TOP OF TUBE("B").
4. ATTACHED THE HARP("E") INTO THE SADDLE("D")
- 5.PLACE THE SHADE("F") ONTO THE TOP OF HARP("E") AND SCREW THE DISC ("G")AND FINIAL ("H") CLOCKWISE TO FIX THE SHADE

IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK.THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY.IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED DO NOT ALTER THE PLUG.

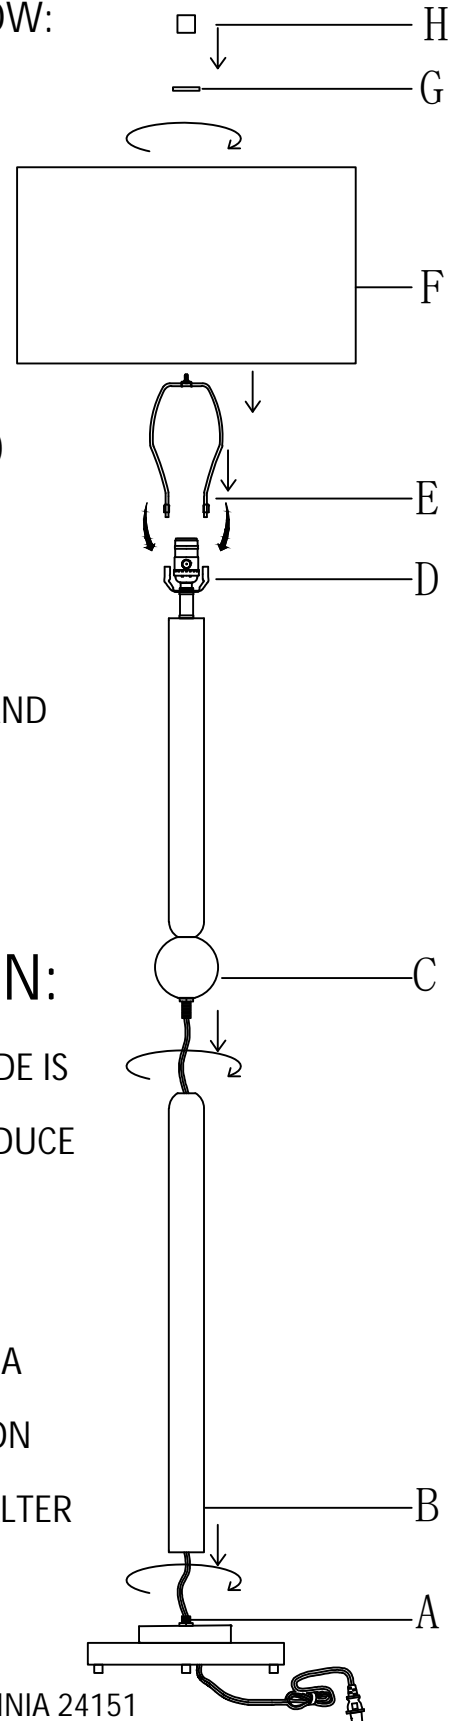

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT,VIRGINIA 24151

www.uttermost.com