

# UTTERMOST

## ASSEMBLY INSTRUCTIONS

ITEM#: 30567

### PARTS LIST:


A. Finial B. Shade C. Harp D. Bulb (Not Included) E. Harp Base G. Threaded Tube

H. Marble Base I. Washer J. Hexagon Nut K. Wrench

**\*\*Please make sure you have all the parts indicated above before you begin assembly of this item. This item should be assembled on a soft surface to prevent scratching the finish during assembly. This item may require periodic tightening.**

1. Place the Marble Base (H) in an upright position on the floor.
2. Carefully, to avoid damage, pull the power cord through the base until the Threaded Tube (G) is pulled into the hole in the base.
3. Secure the lamp base and body using Washer (I), Hexagon Nut (J) and tighten using Wrench (K).
4. Put the Harp (C) into the Harp Base (E), and then put the Shade (B) onto the harp.
5. Put the Finial (A) onto the Harp (C) and turn clockwise to tighten.
6. Use a 3-Way 150W bulb (D) (not included).

### IMPORTANT SAFETY INSTRUCTIONS

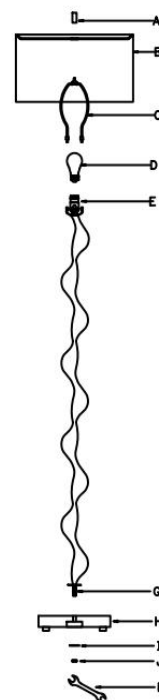

**This portable lamp has a polarized plug (one Blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet. Reverse the plug, if it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.**