

UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO: 30590

PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

To Assemble:

1. Carefully unpack carton and place all parts on a soft, smooth surface to be sure no parts are missing or damaged.
2. Attach Harp (3) into the Saddle (4).
3. Place the Shade (5) onto top of Harp (3).
4. Thread the Finial (6) on top of Harp (3) until tight to secure Shade (5).
5. Take out Rechargeable Bulb (1) from the carton and insert Bulb (1) into the Socket (2).

The included remote control is required to operate the lamp.

Care Instructions:

- Clean with a soft, dry cloth or static duster.
- Always avoid the use of harsh chemicals or abrasive cleaners.

