
UTTERMOST

ASSEMBLY INSTRUCTIONS


STYLE:50007

Parts list/Hardware list


, 42, 44	2 110 4 1 101 4 11 41 4 11 4 11 4 11				
Α	Table Top-S	1 PC	D	Table Top-L	1 PC
В	Table Leg-S	3 PCS	E	Table Leg-L	3 PCS
С	Base Frame-S	1 PC	F	Base Frame-L	1 PC
G	Bolt 6x10 mm	12 PCS	Н	Washer	12 PCS
1	Bolt 6x20 mm	6 PCS	J	Allen Key	1 PC

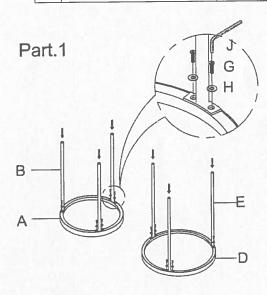

 - 1.Take the Parts carefully out of the carton, and then place them on a flat and soft surface, making sure that the parts will not be damaged.
- 2.Put the Table Top upside down on a flat and soft surface, then fix the all Metal legs screw the Bolts-G (see part.1) into the bottom of Table Top appropriately, please do not tighten too much.
- 3. Then fix the Base frame with Bolts-I(see part.2) into the bottom of Table Leg appropriately, Finally all bolts should be tightened clockwise until secure.



To Clean, wipe with soft dry cloth.

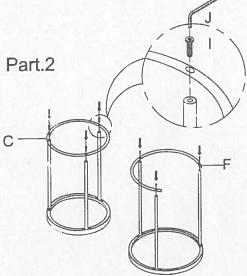



P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151 www.uttermost.com