
 






UTTERMOST


ASSEMBLY INSTRUCTIONS

ITEM:53038


PARTS LIST							
NO	DRAWING	PARTS NAME	Q'TY	NO	PARTS NAME	DRAWING	Q'TY
A		FLAT WASHER 5/16"*3/4"	6PCS	1	SEAT FRAME		1PC
B		LOCK WASHER 5/16"	6PCS				
C		BOLTS DIA 5/16"*3-1/2"	6PCS	2	LEG		2PCS
D		ALLEN WRENCH 5/16"	1PC				

ASSEMBLY BOLTS MAY NEED TIGHTEND AFTER USE

STEP 1 Attach the legs with the seat cushion, then tighten the bolts.

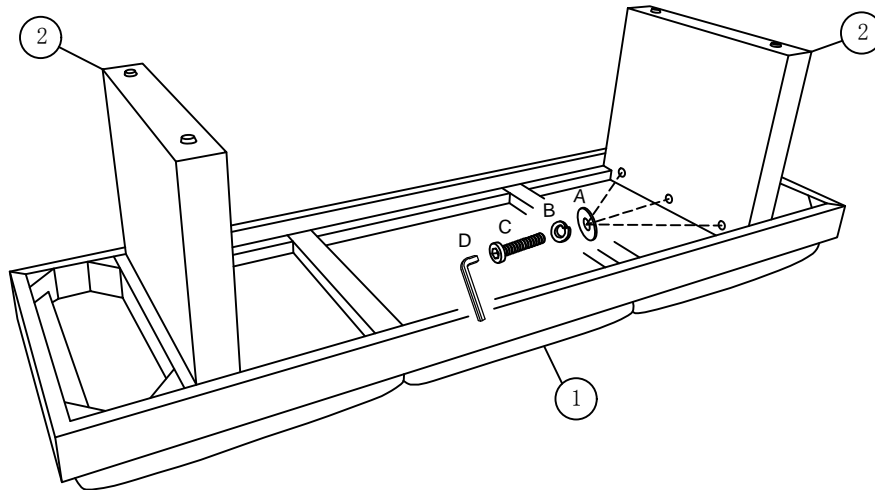

STEP 2 Pull close the zippers after finished assembling.

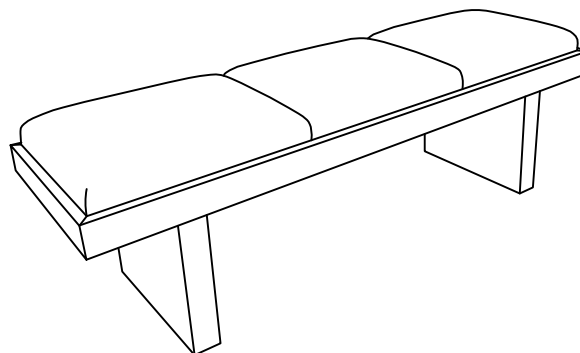

To avoid wobbly product , please follow below steps to assemble:

- 1) Attach the legs.Do not completely tighten the bolts that hold the legs.
- 2) Set the chair on the floor to level and then finish tightening the leg bolts.