




UTTERMOST

Assembly Instruction

STYLE: 29555-1

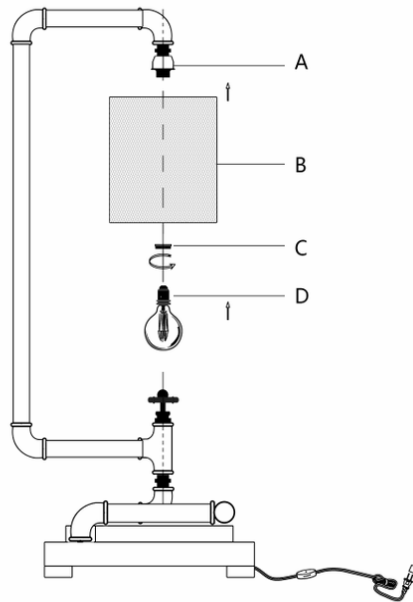

1. Take the parts carefully out of the carton, and place them on a flat surface, making sure that the parts will not be damaged. Do not plug in the lamp until the assembly is completed.
 2. Remove Ring nut (C) from Socket assembly (A)
 3. Place Shade (B) onto Socket (A) and reinstall Ring nut (C) to fix the shade
 4. Screw bulb type G125 (D) into socket
- Use type G125 60W bulb (included) or Type A 100 watt max bulb (not-included).

To clean, wipe with soft dry cloth.

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE, THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY IN THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ATTEMPT TO DEFEAT THIS SAFETY FEATURE.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com