






UTTERMOST

Assembly Instruction

STYLE: 24011

Parts list

A	CABINET	1PC
B	FOOT	4PCS
C	ADJUSTABLE SHELF	1PC

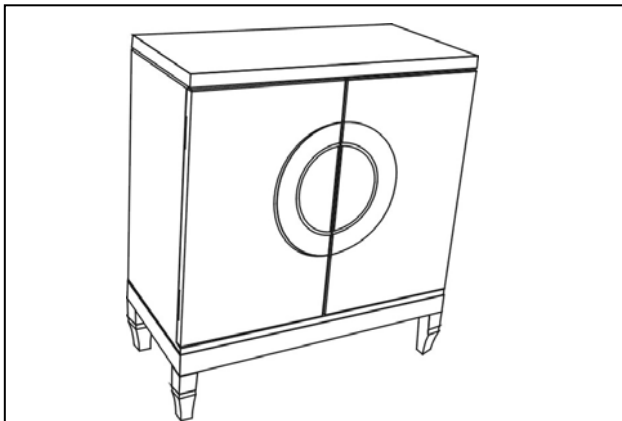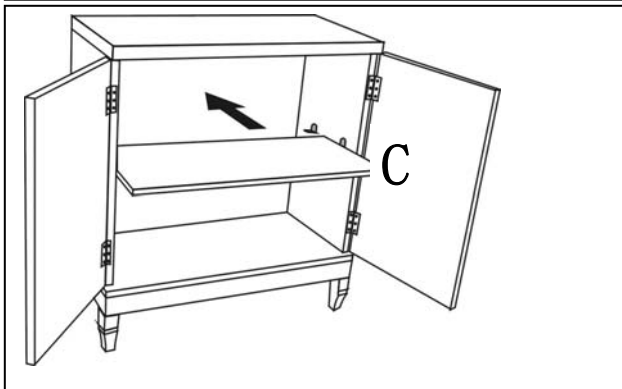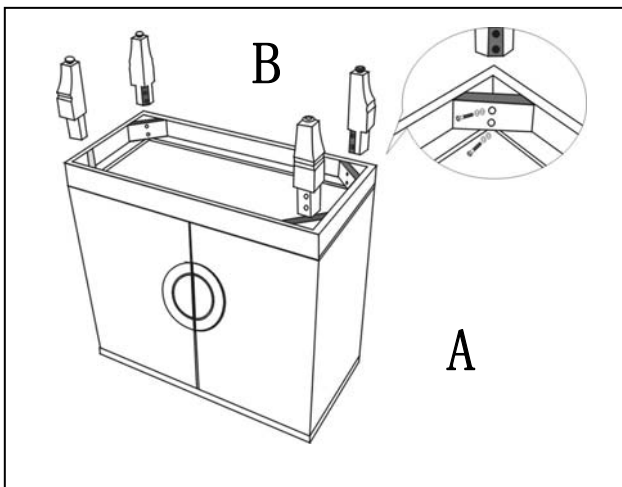

Hardware list

ALLEN HEAD WRENCH	1PC
FLAT WASHER	8PCS
LOCK WASHER	8PCS
ALLEN HEAD BOLT	8PCS
ADJUSTABLE PIN	4PCS

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.

2. Use the allen head bolts, flat washers and lock washers to secure the feet (B) to the bottom of cabinet (A) according to the color labels individually.

3. Insert the shelf pins to the holes of the inner side panels, and put the adjustable shelf (C) on the shelf pins.

4. Screw the adjustable levelers on the bases of foot if cabinet is unsteady.

To Clean, wipe with soft dry cloth.