


# UTTERMOST

## ASSEMBLY INSTRUCTIONS

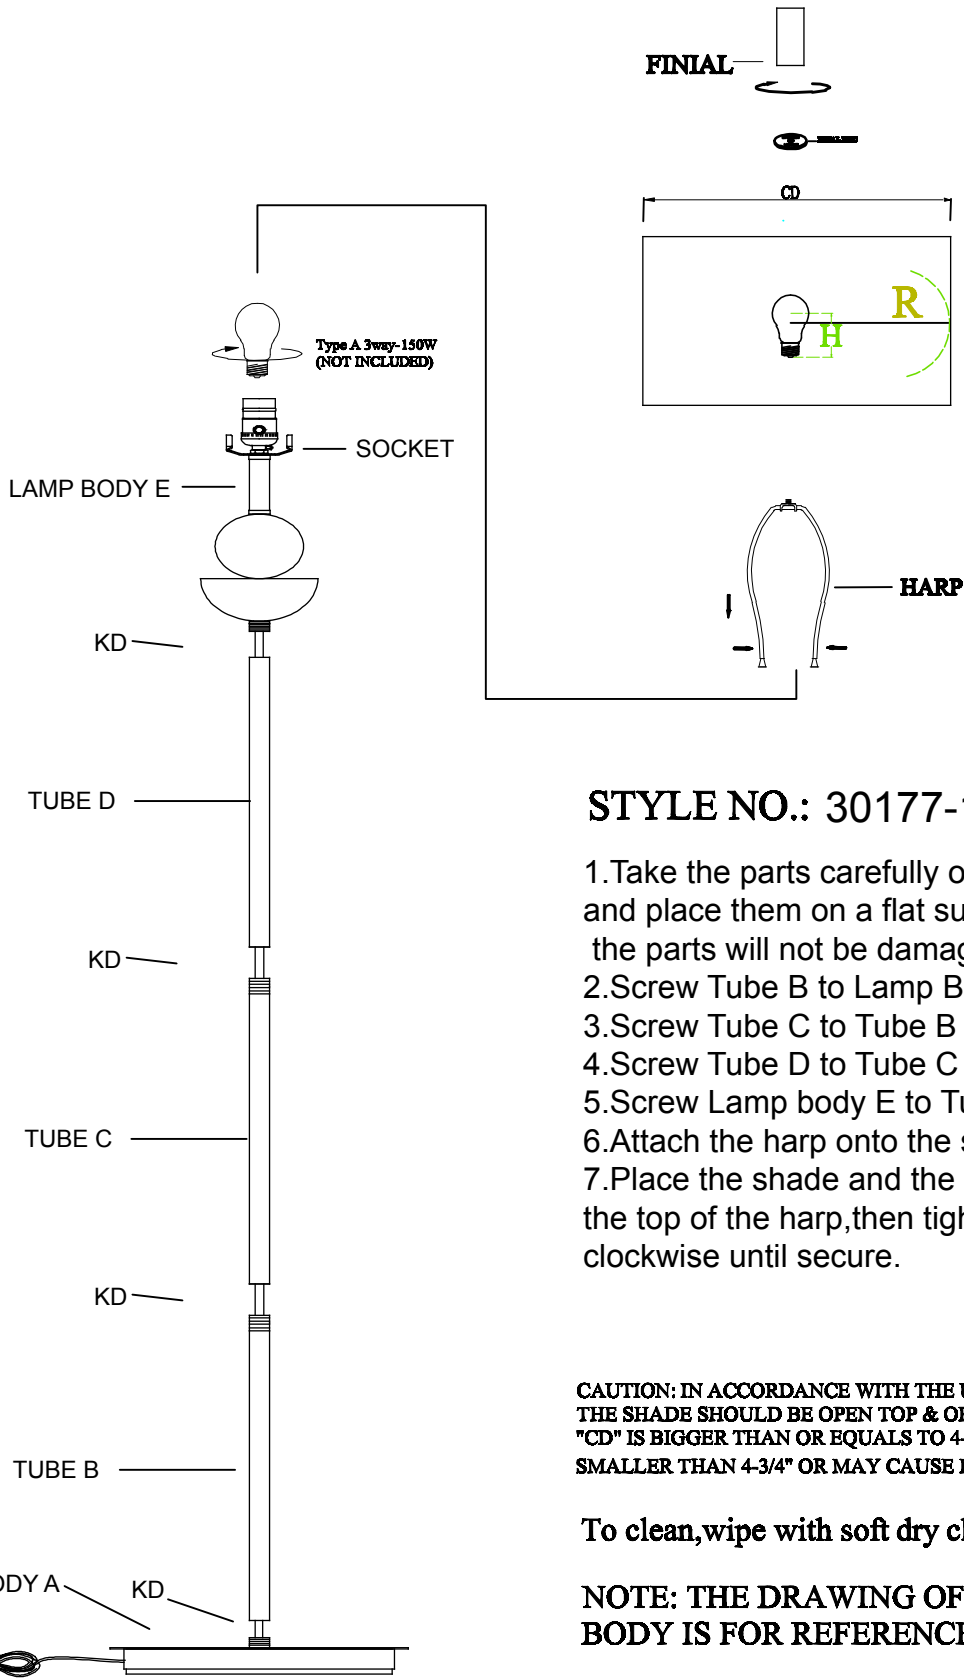

### STYLE NO.: 30177-1

1. Take the parts carefully out of carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Screw Tube B to Lamp Body A until tight,
3. Screw Tube C to Tube B until tight,
4. Screw Tube D to Tube C until tight,
5. Screw Lamp body E to Tube D until tight,
6. Attach the harp onto the saddle as drawing.
7. Place the shade and the finial disc onto the top of the harp, then tighten the finial clockwise until secure.

**CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3 1/4".**

**To clean, wipe with soft dry cloth.**

**NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.**