


# REVELATION


by UTTERMOST

## ASSEMBLY INSTRUCTIONS

R21296




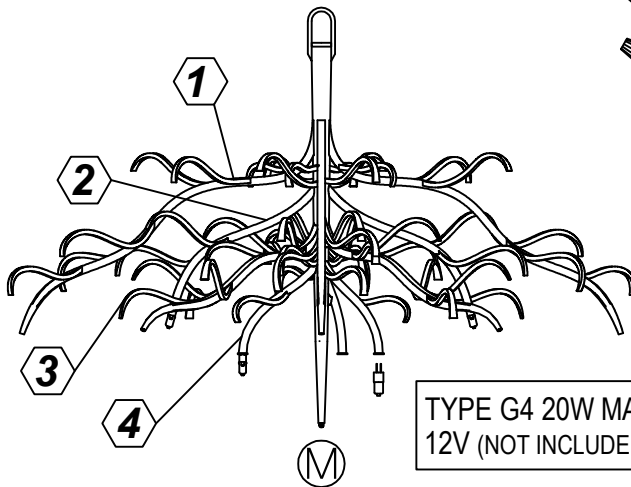


TYPE G4 20W MAX  
12V (NOT INCLUDED)

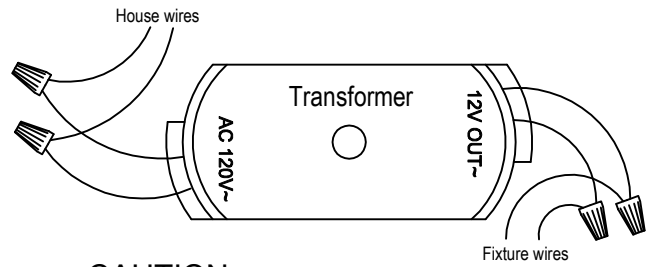

### CAUTION:

Any excess wire not needed must be disconnected from the transformer and cut off do not store in canopy.

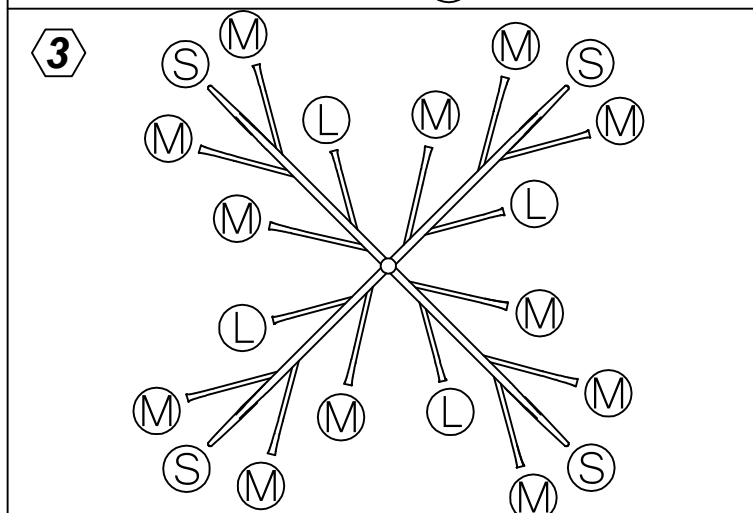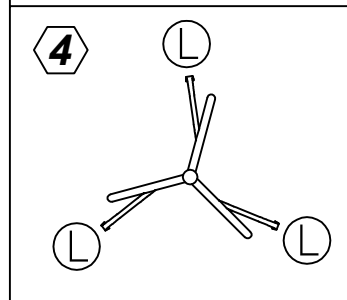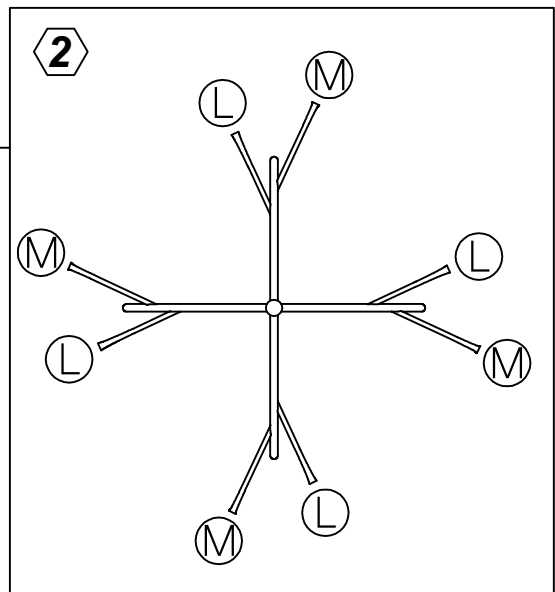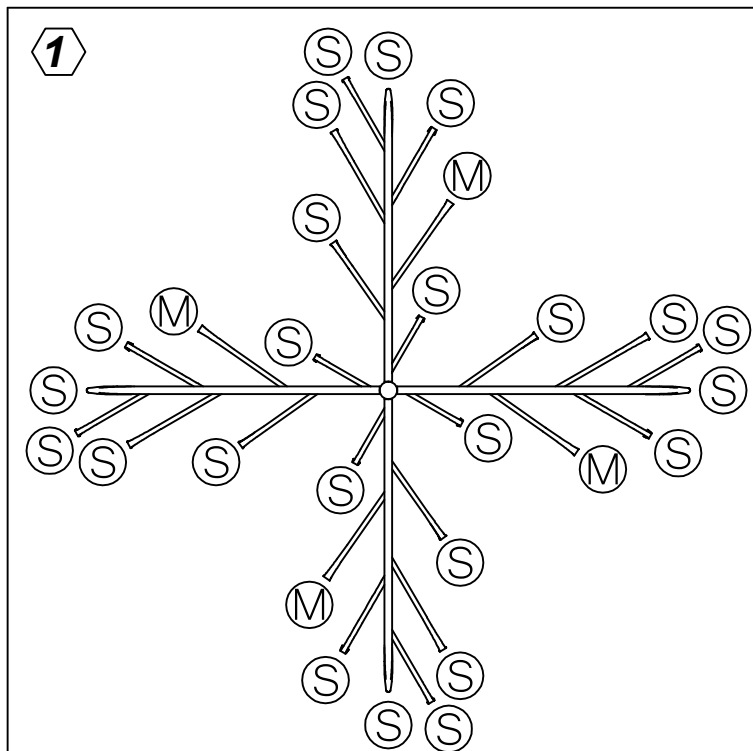

| S   | M   | L   |
|-----|-----|-----|
|     |     |     |
| X28 | X21 | X11 |

# REVELATION

by UTTERMOST

## ASSEMBLY INSTRUCTIONS

**IMPORTANT: YOU SHOULD USE A QUALIFIED ELECTRICIAN TO INSTALL THIS FIXTURE.**

**NOTE: ALWAYS TURN POWER OFF BEFORE INSTALLING LIGHTING FIXTURES!**

**NOTE: THIS IS A LOW VOLTAGE FIXTURE (12V) IF USED WITH A DIMMER SWITCH IT MUST BE A COMPATIBLE ELECTRONIC LOW VOLTAGE (ELV) DIMMER.**

### Installation (see Fig.A)

1. Disconnect power at main electrical panel before installation.
2. Attach **mounting strap** to **outlet box** using **box screws** provided with **outlet box**.
3. Screw **threaded nipple** into **collar loop** as far as it will go. Secure with **lock washer** and **hexnut**.
4. Screw **threaded nipple** into **mounting strap** approximately 1/2 inch. Adjust height of **collar loop** by temporarily holding **canopy** in place against ceiling with **collar loop** extending downward through hole in **canopy**.
5. Use **quick link** on one end of **chain** and attach to **loop** on fixture. Thread **fixture wire** through chain links weaving wire through every second link. Adjust **chain** & wire length as needed for your ceiling height, remove excess if needed, leaving enough for wiring connections.
6. Pull ends of **chain** and wires through **collar ring** and **canopy**.
7. Use second **quick link** and attach to **collar loop**.
8. Pass ends of **fixture wires** through center hole of **collar loop**, **threaded nipple**, and **mounting strap**.

### Wiring (see Fig.B)

9. Split the conductors of the **fixture wire** about 4 inches. Being careful not to expose any of the wire inside of the insulation.
10. Connect the **fixture ground wire** and the **outlet box ground wire** to **mounting strap** with GREEN hex-head **ground screw** to tapped hole in **mounting strap** marked "GND".
11. Connect the half of the **fixture wire** that is white, marked, or has a ribbed surface to the **outlet box supply wire** (WHITE). Connect the other half of the **fixture wire** that is black, unmarked, or has a smooth surface to the **outlet box supply wire** (BLACK or RED). Use **wirenuts** provided.
12. Spread the electrical splices so that the black wire are on one side of the **outlet box** and the white wire are on the other side.
13. Slide **canopy** up into place against ceiling. Slide **collar ring** up and thread onto **collar loop** to secure **canopy** in place.

NOTE: Make sure chain supports the weight of the light fixture and no weight is on either supply or ground wires.

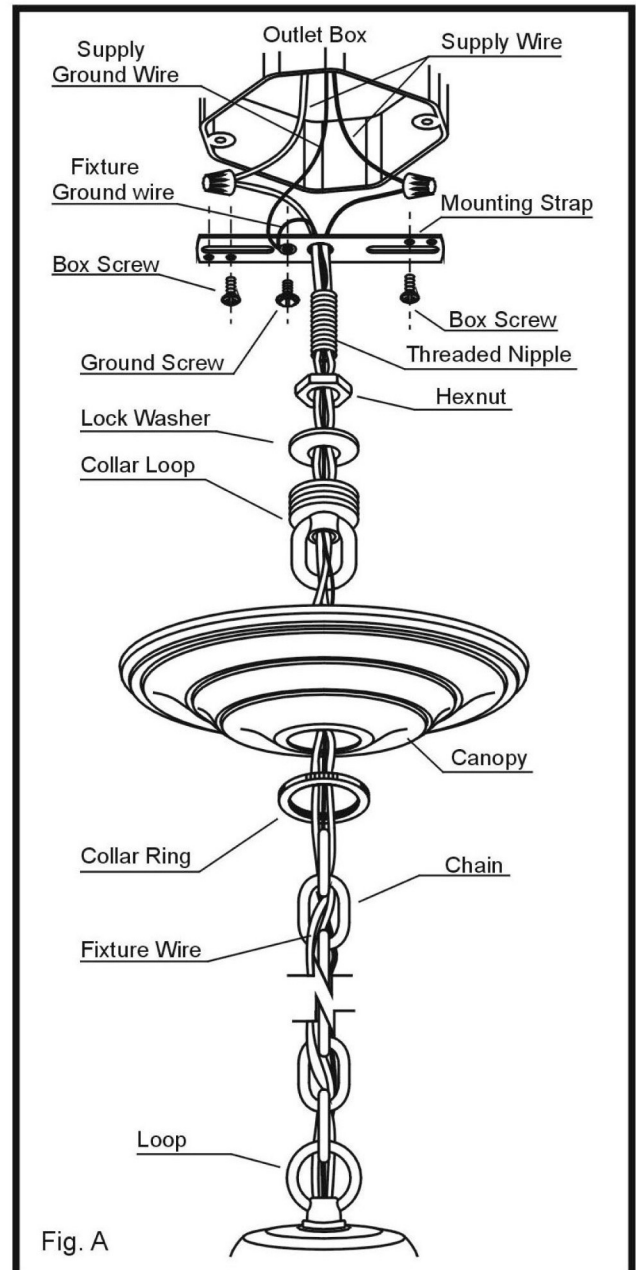


Fig. A

