




REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

ILLUSTRATION

STYLE NO. : R21349

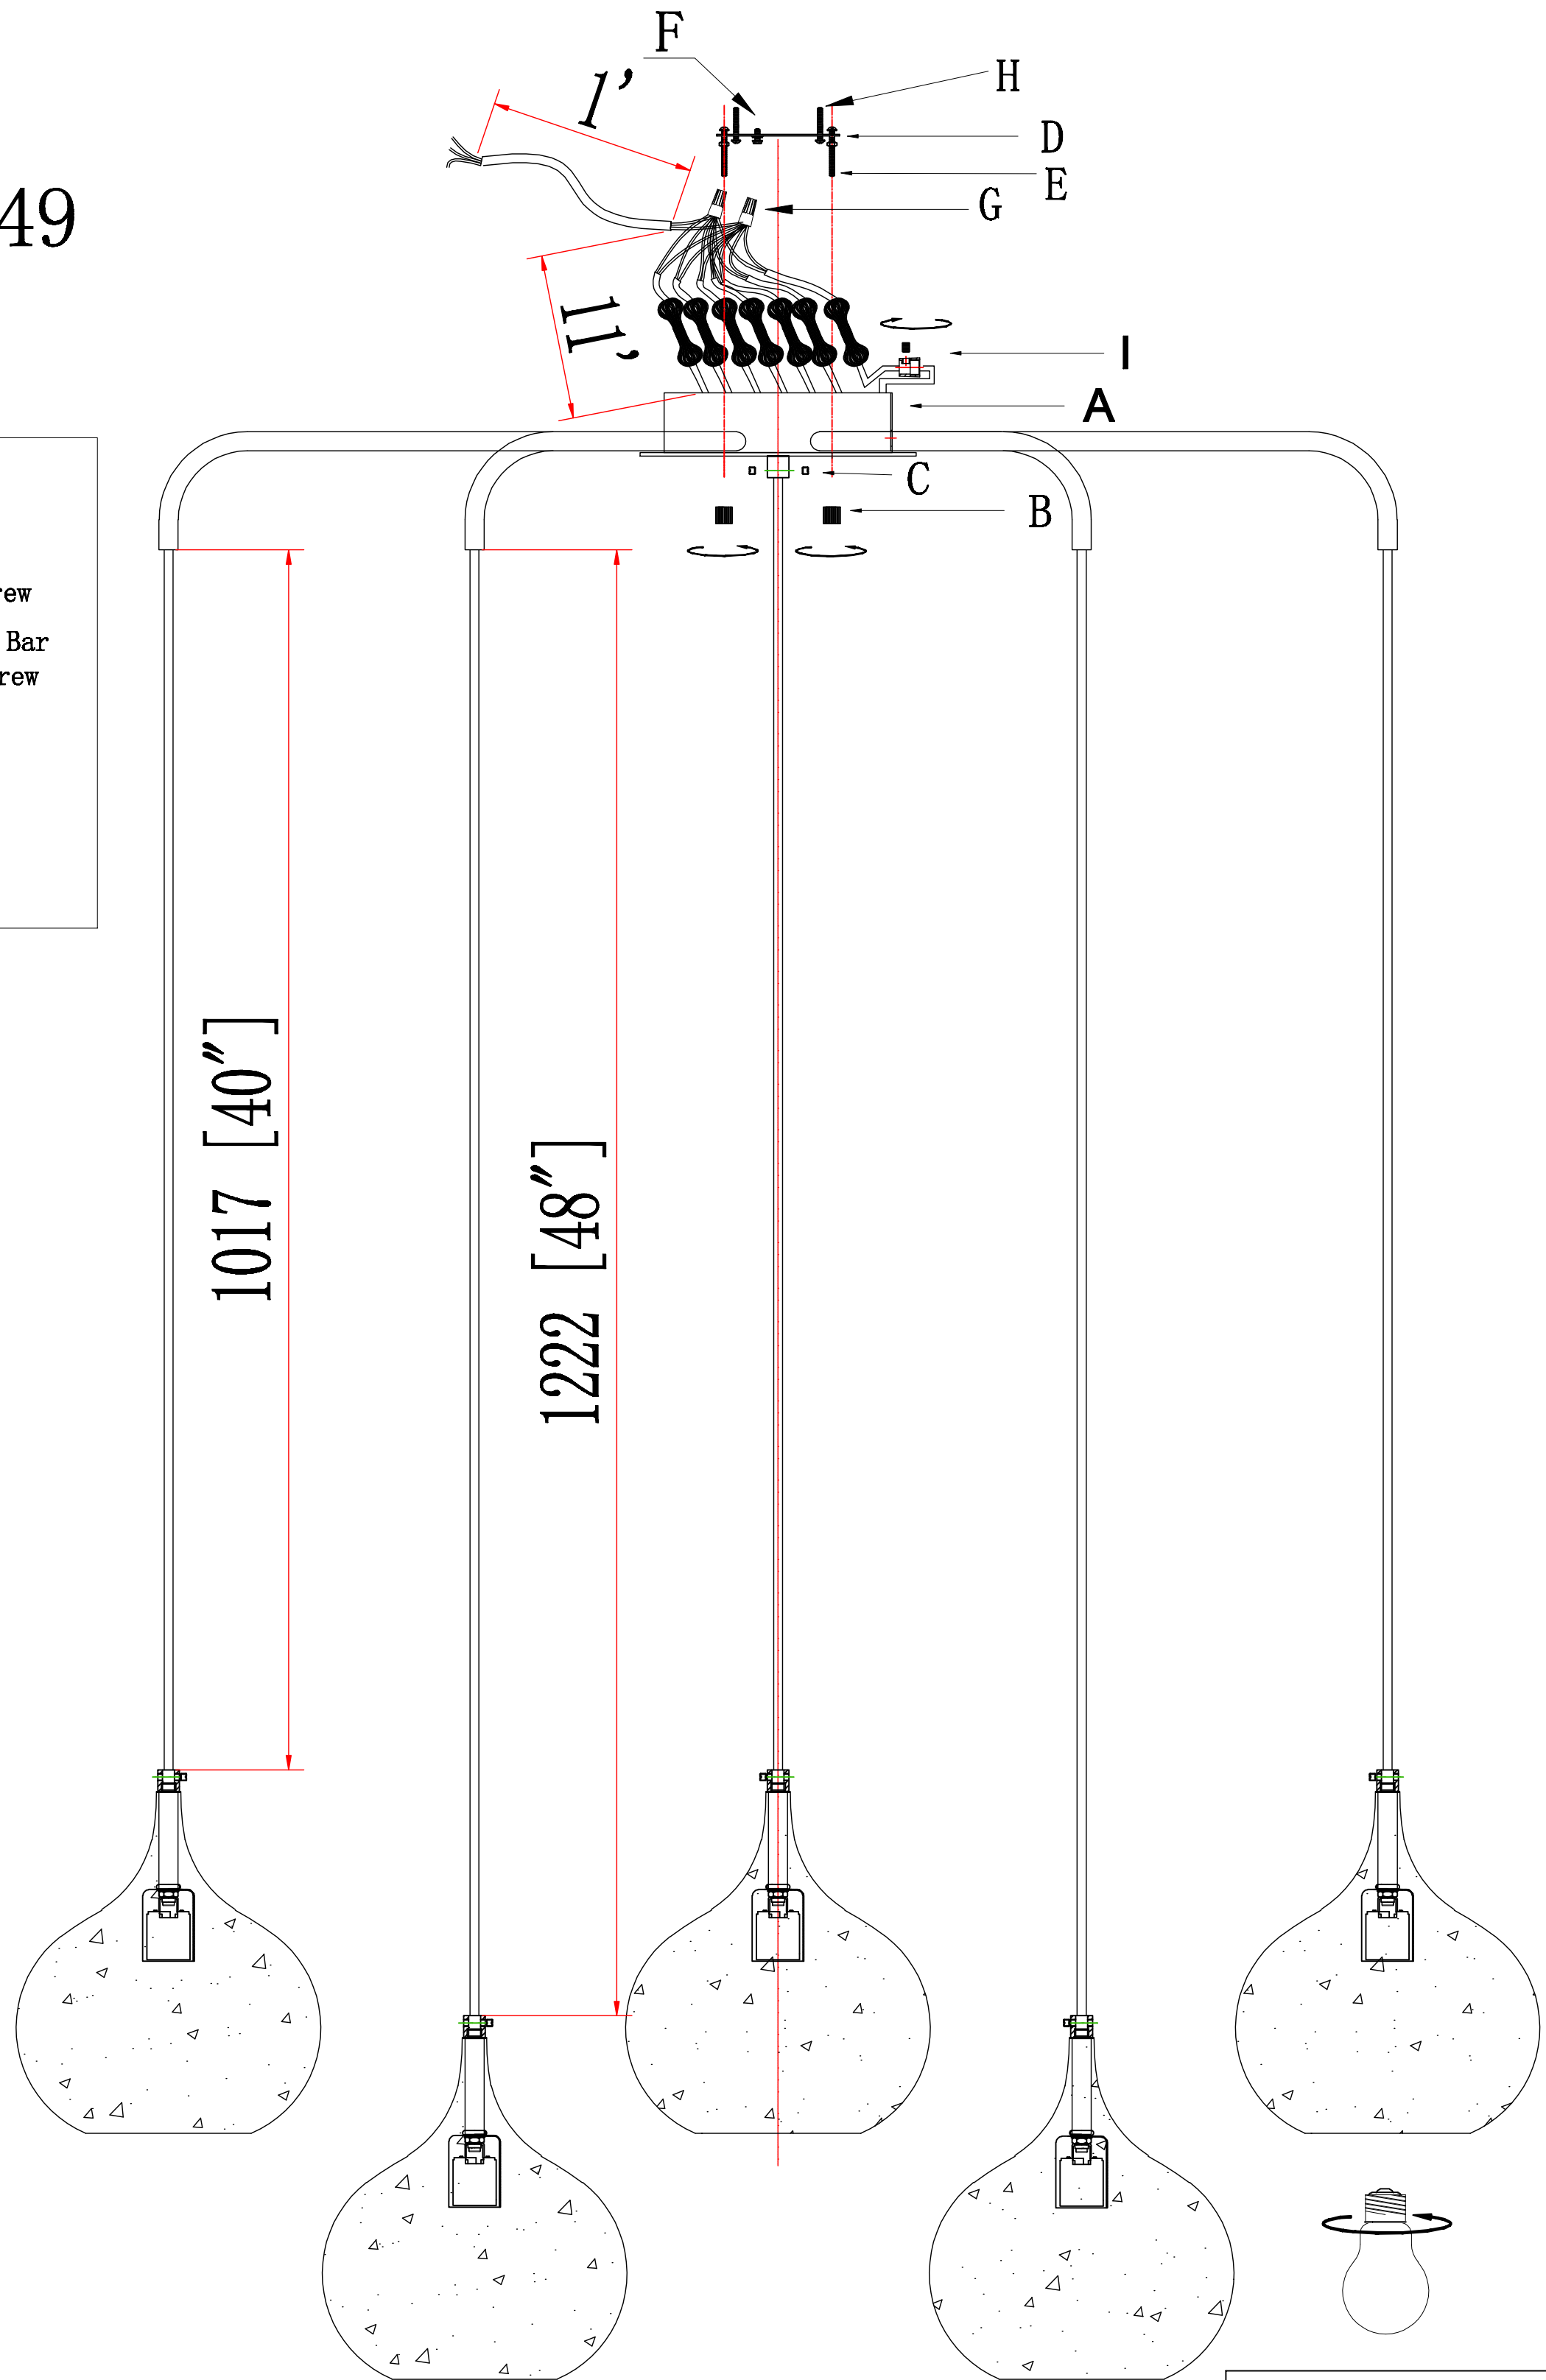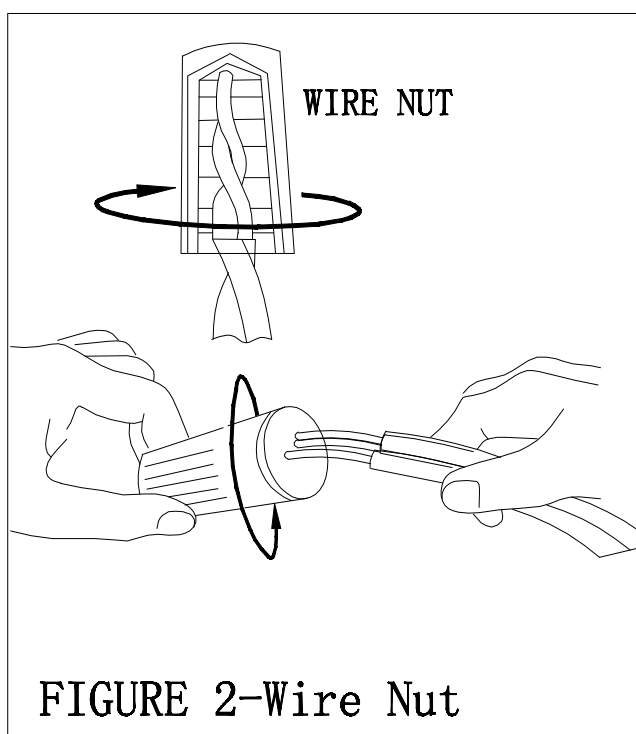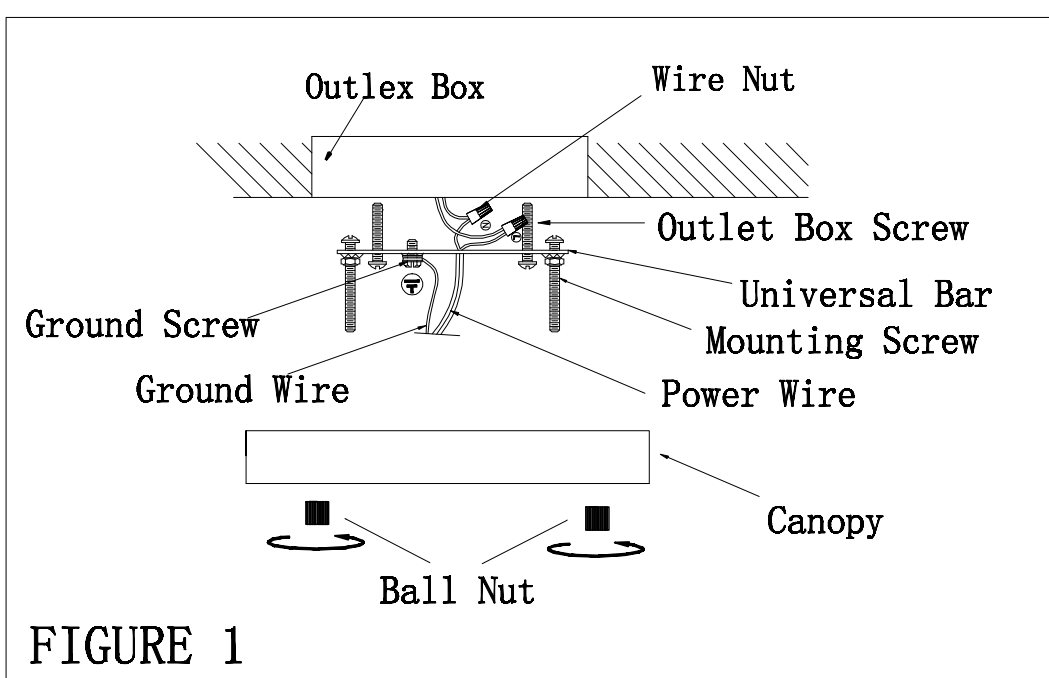

TYPE A 60W MAX
(NOT INCLUDED BULB)

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO. : R21349

Parts and Hardware List

A.	Ceiling Assembly	1PC
B.	Ball Nut	2PCS
C.	plastic screws	2PCS
D.	Universal Bar	1PC
E.	Mounting Screw	2PCS
F.	Green Ground Screw	1PC
G.	Wire Nut	3PCS
H.	Outlet Box Screw	2PCS
I.	Cord clip	6PCS

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

Assembly Instruction

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. We have pre-set cords in a suggested pattern with 3 at 40" length below the canopy and 4 at 48" length below the canopy. Select the length you want for each cord to suit your installation, adjust each cord length by loosening the cord clip, remove excess cord length.
3. Remove the Ball Nuts(B) under the Canopy from the Mounting Screws(E), and take out the Universal Bar(D). Attach the Universal Bar(D) to the Outlet Box by using two Outlet Box Screws(H). (See Figure1)
4. Install the ground wire in the Universal Bar(D) with the supplied Green Ground Screw(F).
5. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box. (Connecting the Wires-See Figure 2)
6. After the wires are connected, tuck them carefully inside the Outlet Box. Attach the Ceiling Assembly(A) to the Mounting Screws(E) and secure with two Ball Nuts(B). (See Figure 1)
7. Install the 7*60 Watt, Type A bulb into the socket of the fixture.