




REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

ILLUSTRATION

STYLE NO. : R21621

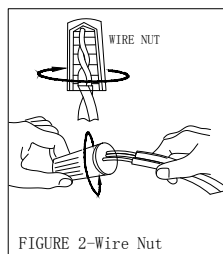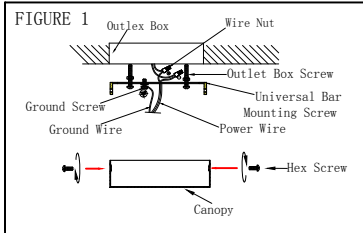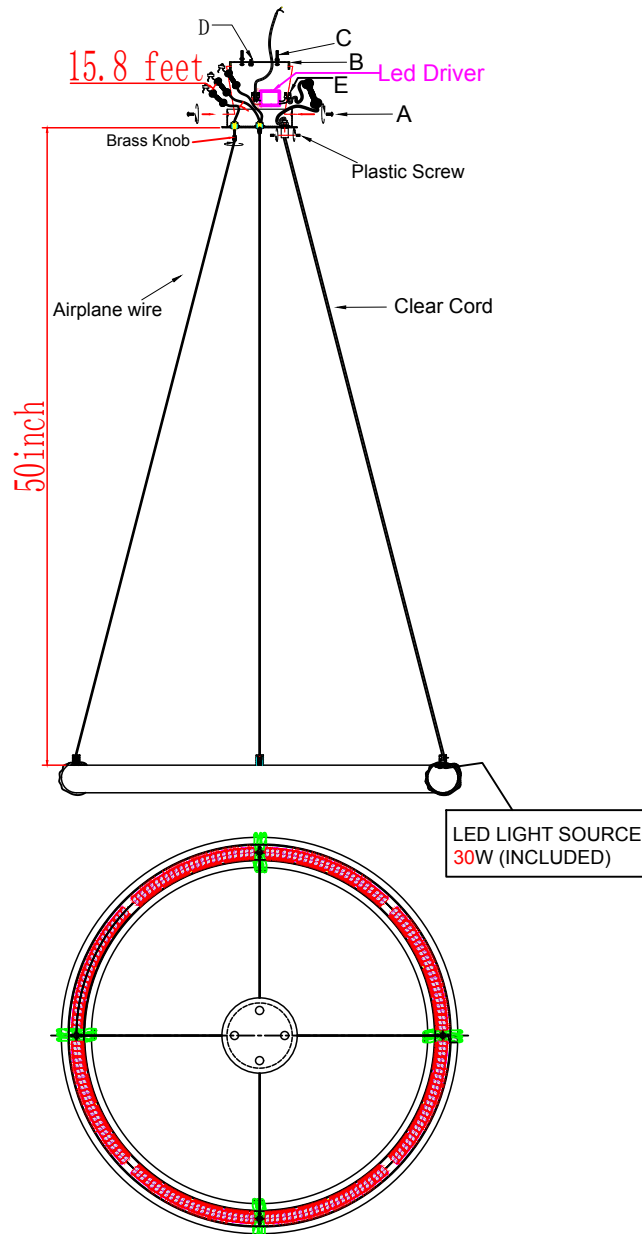

REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE NO. : R21621

Parts and Hardware List

A.	Hex screws	2PCS
B.	Universal Bar	1PC
C.	Outlet Box Screw	2PCS
D.	Green Ground Screw	1PC
E.	Wire Nut	3PCS
F.	Plastic screws	2PCS

Please make sure that you have all the parts indicated before you begin assembling this item.

Please read Wiring Instructions before you begin assembling and installing your Ceiling Lamp.

WARNING: BEFORE INSTALLING, make sure the electricity supply is shut off to avoid a possible electric shock. We suggest a licensed electrician for all lighting fixture installations.

Assembly Instruction

1. Take the parts carefully out of the carton, place them on a flat surface, and make sure that the parts will not be damaged.
2. **We have pre-set airplane wires 50 inches length below the canopy.** Select the length you want for each cord to suit your installation, adjust each cord length by loosening the brass knob, remove excess cord length, re-tighten brass knob after lengths are adjusted for install.
3. Adjust the clear cord length by removing the plastic screws to suit your installation, then secure plastic screws after length is adjusted for install.
4. Please connect Led driver wires, connect V+ to red (+); connect V- to black(-), then wrap the wires with electrical tapes. Install the ground wire in the Universal Bar(B) with the supplied Green Ground Screw(D).
5. Place the null wire, ribbed wire evenly against the ribbed wire from the Outlet Box and place the live wire, smooth wire evenly against the smooth wire from the Outlet Box. (Connecting the Wires-See Figure 2)
6. After the wires are connected, tuck them carefully inside the Outlet Box. Attach the Canopy to the Universal Bar (B) and secure with two Hex Screws(A). (See Figure 1)

Dimming control compatibility: DIMMABLE WHEN USED WITH A LUTRON DVCL-153P-WH DIMMER