

REVELATION

by UTTERMOST

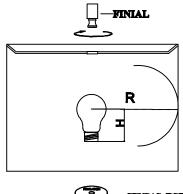

Assembly Instruction

STYLE NO.: R28362-1

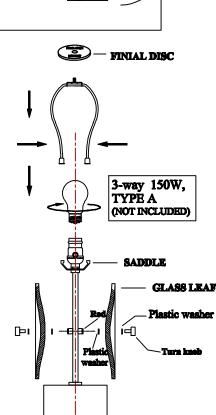

- 1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
- 2. Firstly, attach the harp onto the saddle.
- 3.Second, place the finial disc and the shade onto the harp, then screw the finial clockwise onto the harp until the shade is secured.
- 4.Lastly, place the plastic washers and glass leaf into rod on the lamp body and then screwed by turn knob until tightly.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO $4\frac{1}{2}$ ", "R" IS NOT SMALLER THAN $4\frac{3}{4}$ " OR MAY CAUSE FIRE. "H" IS $3\frac{1}{4}$ ".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.

LAMP BODY