




REVELATION

by UTTERMOST

ASSEMBLY INSTRUCTIONS

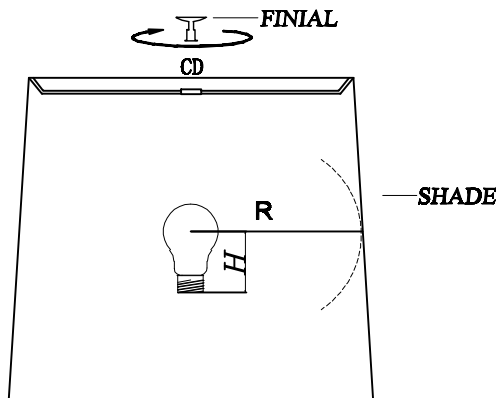

150W 3-WAY, TYPE A
(NOT INCLUDED)

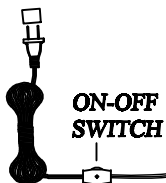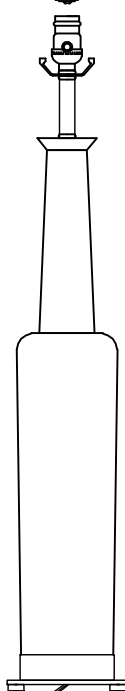

ON-OFF
SWITCH

Assembly Instruction

STYLE NO.: R30089

1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
2. Attach the harp onto the saddle.
3. Place the finial disc and the shade onto the harp, then screw the finial clockwise onto the harp until the shade is secured.
4. The lamp may be used with either the line switch or 3-way socket. To use the line switch for turning on and off the lamp, turn the line switch to the on position and set the 3-way socket to the desired setting. To use the 3-way socket to turn the lamp on and off, place the line switch in the on position.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4½", "R" IS NOT SMALLER THAN 4¾" OR MAY CAUSE FIRE. "H" IS 3¼".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.