
## REVELATION by UTTERMOST

## **ASSEMBLY INSTRUCTIONS**

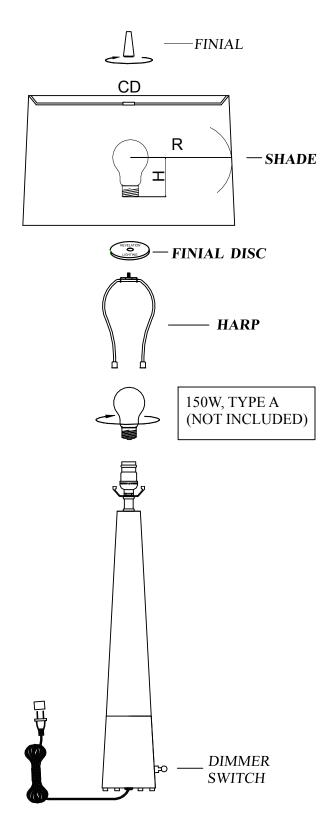

## **Assembly Instruction**

**STYLE NO.: R30212** 

- 1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
- 2. Attach the harp onto the saddle.
- 3. Place the finial disc and the shade onto the harp, then screw the finial clockwise onto the harp until the shade is secured.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO  $4\frac{1}{2}$ ", "R" IS NOT SMALLER THAN  $4\frac{3}{4}$ " OR MAY CAUSE FIRE. "H" IS  $3\frac{1}{4}$ ".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.