REVELATION

by UTTERMOST ASSEMBLY INSTRUCTIONS

ASSEMBLY INSTRUCTIONS: MODEL NUMBER:R30218

THANK YOU FOR PURCHASING THIS TABLE LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

CAUTION:DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY. UNPLUG WHEN REPLACING THE LAMP BULB.

- 1. Carefully unpack carton and place all parts on a soft floor.
- 2. Screw and tighten assembly (B), clockwise onto part(A).
- 2.Attach harp(C)into the saddle(B).
- 4.Place the shade(D)onto top of harp(C).
- 5.Screw and tighten Finial(E), clockwise onto part(C).

IMPORTANT SAFETY INSTRUCTION:

This portable lamp has a polarizedplug(one blade is wider than the other), as a safety feature to reduce the risk of electric shock.

This pulg will fit in a polarized outlet only one way.

If it does not fit in the outlet, reverse the plug.


If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted.

Dot not alter this plug.

Care and maintenance

To clean, wipe with a soft dry cloth.

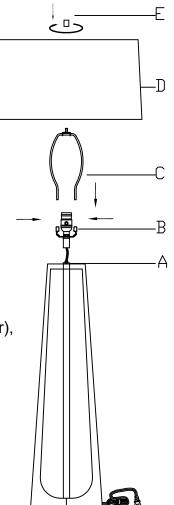

P.O. Box 558 3325 Grassy Hill Road Roky Mount, VA 24151 www.uttermost.com/Revelation