
## REVELATION BY UTTERMOST ASSEMBLY INSTRUCTIONS

## **DIMMER SWITCH**

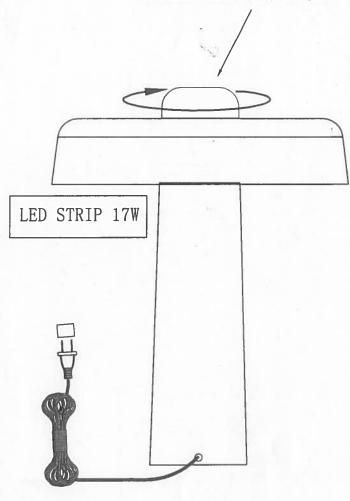

## **Assembly Instruction**

STYLE NO.: R30284-1

- 1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
- 2. When the top part is turned clockwise, the light will turn on; when the maximum brightness is reached, please stop turning it clockwise.
- 3. Turn off the light counterclockwise.

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.