
REVELATION BY UTTERMOST ASSEMBLY INSTRUCTIONS

Assembly Instruction

STYLE NO.: R30535-1

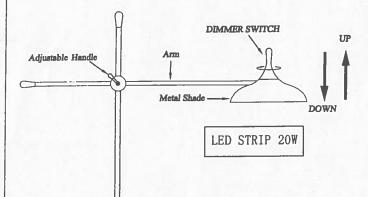

- 1. Take the parts carefully out of the carton, and place them on a flat surface, make sure that the parts will not be damaged.
- 2. When the dimmer switch is turned clockwise, the light will turn on; when the maximum brightness is reached, please stop turning it clockwise.
- 3. Turn off the light counterclockwise.
- 4. Turn the adjustable handle clockwise, the arm with metal shade can be adjusted up and down; Turn the adjustable handle counterclockwise unitl it's secured once adjust height well.

WARNING: BEFORE USER MAINTENANCE. Make sure the electricity supply is shut off to avoid a possible electric shock.

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.