


# UTTERMOST

ASSEMBLY INSTRUCTIONS

## STYLE#: 28135-1

UNPACK ALL LAMP PARTS ON A SOFT, SMOOTH SURFACE-INVENTORY ALL PARTS

1. Place the **Base** in an upright position on the floor.
2. Position the **Part B** onto the **Base**, then thread the **Flat Washer** to tighten the **Hex Nut** by using **Wrench** enclosed in the parts bag.
3. Thread **Part A** into **Part B**, use the **Allen Wrench** provided to tighten (turn clockwise) all **Screws** at the top of **Part B**.
4. Remove **Socket collar** from the **Socket** by turning counter clockwise.  
Position the **Shade** on the **Socket**, located the **Metal Sleeve** and **Socket Collar** with the **Plastic Wrench** to the **Socket**. Hand tighten until snug.
5. Install the Edison **Bulb** (Not Included) onto the lamp before connecting the plug to the electricity outlet Box.
6. **Turning Knob** can adjust the Rods height to be assembled according to your desired height.

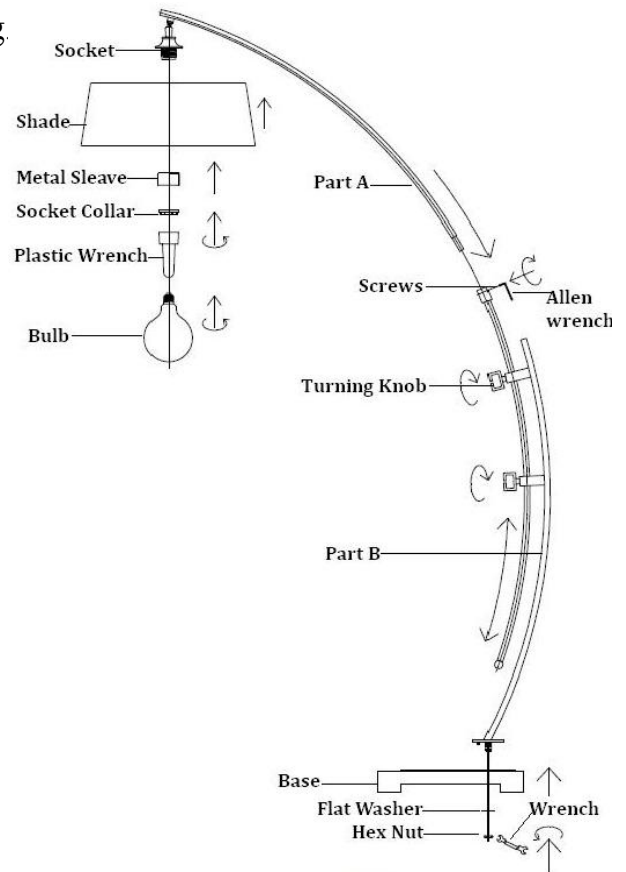

28135-1

### IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug ( one blade is wider than the other ) as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.