


UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE# 28194-1

Carefully unpack all lamp parts from carton. We suggest a licensed electrician for all fixture installations.

1. Take the lamp carefully out of the Carton, and place on a flat surface.
2. Insert the **Lamp Body** into the top of the **Base** while pulling excess cord where it exits the **Base**. Attach **flat washer** and **Lock Washer** and **Hex nut** to the threaded **Nipple A** of **Lamp Body**. The **Flat Washer** and **Lock Washer** and **Hex Nut** are pre-positioned on the cord. Tighten the **Hex Nut** by using wrench enclosed in the parts bag.
3. Place the **Plastic Washer#1** onto the **Nipple B**. Then place **Glass** onto the **Socket** and **Nipple B**. Put **Plastic Washer #2** onto **Nipple B**, and thread the **Screw**. Hand tighten until snug.
4. Install correct **Bulbs**(**Not Included**) referring to fixture markings and /or labels for maximum wattage.

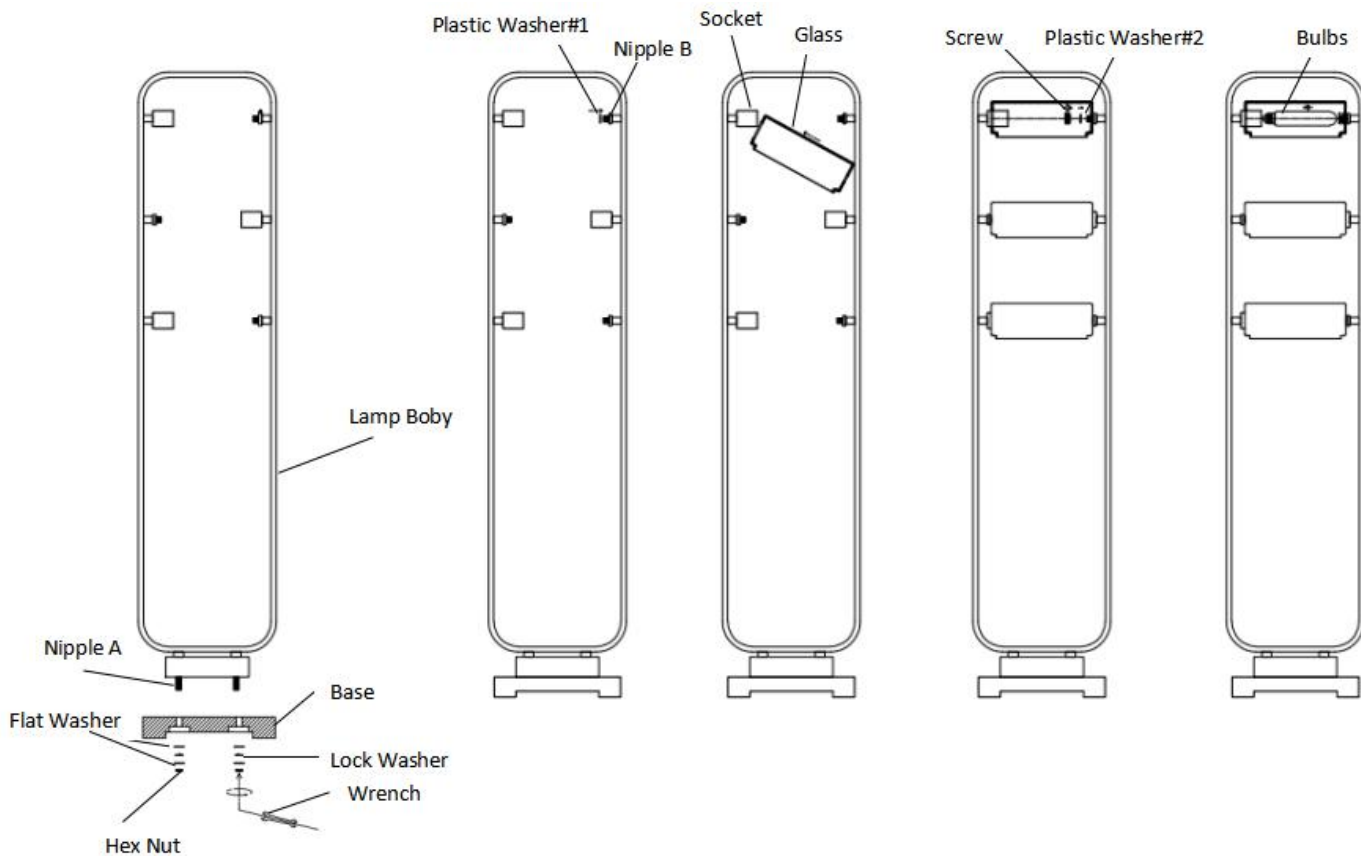

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way.

If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

