

STYLE NO.: W26013-1

- 1. Take the parts carefully out of carton, and place them on a flat surface, make sure that the parts will not be damaged.
- 2.Attach the harp onto the saddle as drawing.

3.Place shade onto the top of the harp, then tighten the finial clockwise until secure.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 32".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.