

ASSEMBLY INSTRUCTIONS:
MODEL NUMBER: W26127-1

THANK YOU FOR PURCHASING THIS TABLE LAMP .
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.

1. CAREFULLY UNPACK ALL PARTS FROM CARTON
2. THREAD THE SOCKET ASSEMBLY (B) CLOCKWISE TO THE BODY (A)
3. ATTACH HARP (D) INTO THE SADDLE OF SOCKET (C)
4. PLACE THE SHADE (E) ONTO THE TOP OF HARP (D)
5. SCREW AND TIGHTEN FINIAL (F) CLOCKWISE ONTO HARP (D)

IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER), AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

