

ASSEMBLY INSTRUCTIONS

STYLE NO: W26152-1

THANK YOU FOR PURCHASING THIS TABLE LAMP.

PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

**CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.**

1. Carefully unpack carton and place all parts on a soft, smooth surface. Inventory all parts.
2. Thread tube (B) clockwise to base (A).
3. Thread socket assembly (C) clockwise to tube (B).
Carefully pull excess power cord through the lamp base to prevent twisting of cord, tighten securely.
4. Attach harp (E) into the saddle of socket (D).
5. Place the shade (F) onto top of harp (E).
6. Screw and tighten Finial (G), clockwise onto harp (E).

Recommended use of one on-off, 40-watt max
medium base (E-26) light bulb, or equivalent (not included).

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

Care and Maintenance

To clean, wipe with a soft dry cloth.

