

ASSEMBLY INSTRUCTIONS

MODEL NUMBER W26163-1

THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

**CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.**

1. Carefully unpack carton and place all parts on a soft, smooth surface. Inventory all parts.
2. Thread tube (B) clockwise to base (A).
3. Thread tube (C) clockwise to tube (B).
4. Thread socket assembly (D) clockwise to tube (C).
Carefully pull excess power cord through the lamp base to prevent twisting of cord, tighten securely.
5. Attach harp (F) into the saddle of socket (E).
6. Place the shade (G) onto top of harp (F).
7. Screw and tighten finial (H), clockwise onto harp (F).

Recommended use of one on/off 60-watt max medium base (E-26) light bulb, or equivalent (not included).

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other), as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way.

If it does not fit fully in the outlet, reverse the plug.


If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted.

Do not alter this plug.

Care and Maintenance

To clean, wipe with a soft dry cloth.

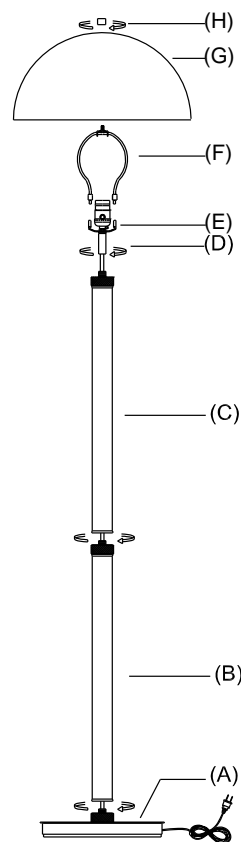

ASSEMBLY INSTRUCTIONS

MODEL NUMBER W26163-1

THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

**CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.**

1. Carefully unpack carton and place all parts on a soft, smooth surface. Inventory all parts.
2. Thread tube (B) clockwise to base (A).
3. Thread tube (C) clockwise to tube (B).
4. Thread socket assembly (D) clockwise to tube (C).
Carefully pull excess power cord through the lamp base to prevent twisting of cord, tighten securely.
5. Attach harp (F) into the saddle of socket (E).
6. Place the shade (G) onto top of harp (F).
7. Screw and tighten finial (H), clockwise onto harp (F).

Recommended use of one on/off 60-watt max medium base (E-26) light bulb, or equivalent (not included).

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other), as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way.

If it does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted.

Do not alter this plug.

Care and Maintenance

To clean, wipe with a soft dry cloth.

