

ASSEMBLY INSTRUCTIONS
STYLE NO: W26167-1

THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.

1. Carefully unpack carton and place all parts on a soft, smooth surface. Inventory all parts.
 2. Screw tube (B) onto base (A). Carefully pull excess cord through base during assembly.
 3. Screw tube (C) into tube (B).
 4. Screw tube (D) into tube (C).
 5. Screw tube (F) into tube (E) and adjust the position of tube (F) so that there is a consistent curve. Then, fix tube (F) into tube (E) by inserting 2 set screws (J) into the hole on the top of tube (E), tighten using allen wrench (K). Gently pull cord out of tube (E).
 6. Screw tube (E) into tube (D). The arm should be facing directly forward over the base of the lamp. If it is not facing forward, please unscrew the tube (B) from the base (A) just a little bit so that the arm is facing forward. Once in the correct position, secure tube (B) onto lamp base (A) with 2 set screws (J) by using allen wrench (K). Gently pull excess cord through base (A).
- Note: The assembled arm should be facing forward as in the sketch.
7. Remove socket ring (I) from the socket (G). Place lamp shade (H) onto socket (G). Secure the shade by screwing socket ring (I) back onto socket (G).

IMPORTANT SAFETY INSTRUCTIONS

THIS PORTABLE LAMP HAS A POLARIZED PLUG (ONE BLADE IS WIDER THAN THE OTHER) AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF THE PLUG DOES NOT FIT FULLY INTO THE OUTLET, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

Care and Maintenance
To clean, wipe with a soft dry cloth.

