

**ASSEMBLY and CARE INSTRUCTIONS**  
Model #: W26170-1

THANK YOU FOR PURCHASING THIS TABLE LAMP.

PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.

UNPLUG WHEN REPLACING THE LAMP BULB.

- Each lamp is hand finished one at a time, therefore no two are exactly alike.
- Take the parts carefully out of the carton, and place them on a flat surface.
- Remove the wrapping from the lamp shade, be careful not to damage the shade.

**Assembly Instructions**

1. Place the harp onto the saddle.
2. Place shade onto the top of the harp.
3. Place finial on the top of the harp, then tighten the finial clockwise until tight.

**Important Safety Instructions**

This portable lamp has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.

