

ASSEMBLY INSTRUCTIONS

MODEL NUMBER W26178-1

THANK YOU FOR PURCHASING THIS FLOOR LAMP.
PLEASE FOLLOW THE INSTRUCTIONS LISTED BELOW:

**CAUTION: DO NOT PLUG INTO WALL OUTLET BEFORE ASSEMBLY.
UNPLUG WHEN REPLACING THE LAMP BULB.**

1. Carefully unpack carton and place all parts on a soft, smooth surface. Inventory all parts.
2. Screw tube (B) onto base (A) until tight. As you assemble, gently pull any excess cord through the lamp base to avoid tangling.
3. Screw tube (C) to tube (B) until tight
4. Screw tube (D) to tube (C) until tight.
5. Screw part (E) to Tube (D) until tight.
6. Screw saddle (F) to part (E) until tight.
7. Attach harp (G) into the saddle of socket (F).
8. Place the shade (H) onto the top of harp (G).
9. Screw and tighten finial (I), clockwise onto harp (G).

IMPORTANT SAFETY INSTRUCTIONS:

This portable lamp has a polarized plug (one blade is wider than the other), as a safety feature to reduce the risk of electric shock.

This plug will fit in a polarized outlet only one way.

If it does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician.

Never use with an extension cord unless plug can be fully inserted.

Do not alter this plug.

Care and Maintenance

To clean, wipe with a soft dry cloth.

