


BULB
TYPE A MAX 100W
NOT INCLUDED

Assembly Instruction STYLE NO:26614-1

1. Take the parts carefully out of the carton, and place it on a flat surface, make sure that the parts will not be damaged.
2. Screw the socket assembly (B) onto the base (A)
3. Attach the harp onto the saddle as drawing.
4. Install the bulb into the socket.
5. Place the finial disc and shade onto the harp, then screw the finial clockwise onto harp until shade is secure.

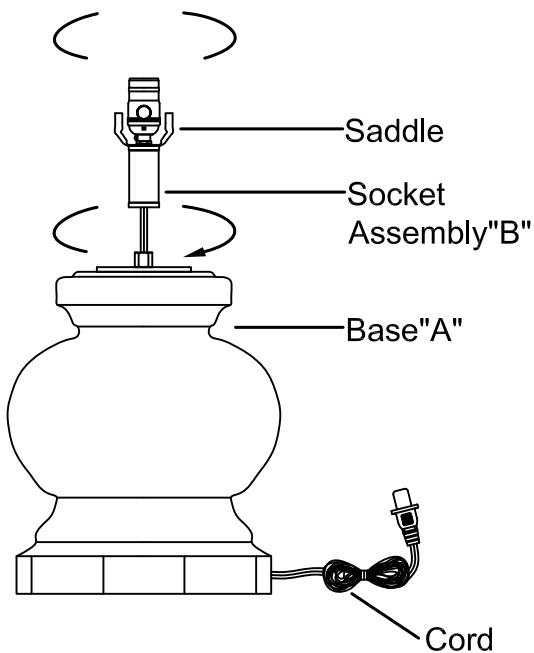

CAUTION: IN ACCORDANCE WITH THE UL REGULATION. THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUAL TO 4", "R" IS NOT SMALLER THAN 3-1/2" OR MAY CAUSE FIRE. "H" IS 3-1/4"

TO clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

www.uttermost.com