




UTTERMOST

Thank you for purchasing an Uttermost lamp. We hope you are as proud to display this lamp as we were to make it.

- Each lamp is hand finished one at a time, there for no two are exactly alike.
- Remove the wrapping on the lamp shade, be careful not to damage the shade.
- The Uttermost finial disk is to be placed on the top of the shade spider, under the finial, as shown in the diagram.

Assembly Instructions

1. Place harp onto saddle, then place the shade onto the harp.
2. Place finial disk then fasten finial onto harp to fix shade.

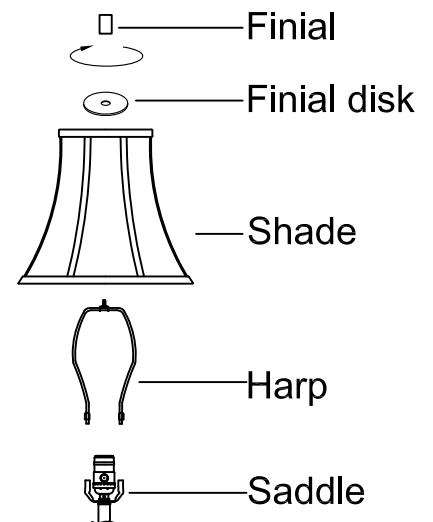

IMPORTANT SAFETY INSTRUCTION:

THIS PORTABLE LAMP HAS A POLARIZED PLUG(ONE BLADE IS WIDER THAN THE OTHER). AS A SAFETY FEATURE TO REDUCE THE RISK OF ELECTRIC SHOCK. THIS PLUG WILL FIT IN A POLARIZED OUTLET ONLY ONE WAY. IF IT DOES NOT FIT, REVERSE THE PLUG. IF IT STILL DOES NOT FIT, CONTACT A QUALIFIED ELECTRICIAN. NEVER USE WITH AN EXTENSION CORD UNLESS PLUG CAN BE FULLY INSERTED. DO NOT ALTER THE PLUG.

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151

WWW.UTTERMOST.COM