MANUFACTURERS OF WALL DECOR, LIGHTING, DECORATIVE ACCESSORIES AND ACCENT FURNITURE

UTTERMOST

Assembly Instruction

STYLE:13824

Parts list

A	WOOD TOP	1PC
B	METAL STAND	2PCS

Hardware list

SCREW	8PCS
ALLEN WRENCH	1PC

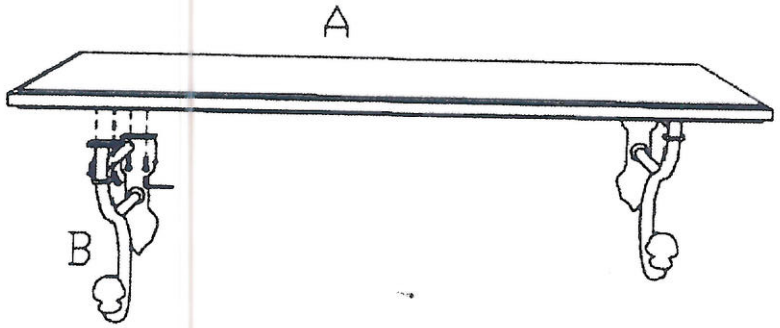

1. Take the parts carefully out of the carton, and place it on a flat surface,make sure that the parts will not be damaged.

2. Use screws to secure the metal stands (B) with wood top (A)

PO BOX 558/3325 GRASSY HILL RD. ROCKY MOUNT, VIRGINIA 24151
www.uttermost.com