UTTERMOST
ASSEMBLY INSTRUCTIONS

STYLE#: 30199-1

Carefully unpack all Assembly parts from the carton.

1. Take the lamp carefully out of the Carton, and place it on a flat surface.

NOTE: Cord needs to be fed through the base until all parts are pulled together before continuing to Step 2.

2. Thread **Part C** into the **Base** by turning **Part C** clockwise to tighten until snug.


3. Thread **Part B** into **Part C** by turning **Part B** clockwise to tighten until snug.

4. Thread **Part A** into **Part B** by turning **Part A** clockwise to tighten until snug.

5. Locate the **Harp** by pressing the ends of the Harp into the **Saddle** on the top of **Base.**

6. Place the **Shade** over the top end of the **Harp**. Secure by threading the **Finial** onto the **Harp**. Hand tighten until snug.

7. Install correct Bulbs referring to fixture markings and/or labels for maximum wattage (not included).

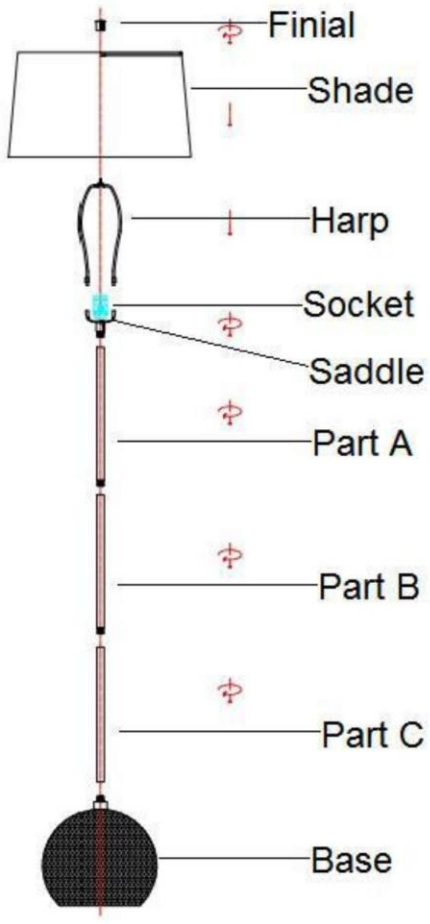

30199-1

IMPORTANT SAFETY INSTRUCTIONS

This Floor lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.