UTTERMOST

ASSEMBLY INSTRUCTIONS

STYLE#: 30576-1

Careful unpack all lamp parts from the carton.


Hardware:FINIAL(A),FINIAL(B),FINIAL(C),TUBE(A)

1.Take the lamp carefully out of the carton ,and place it on a flat surface.

2.Please take away **Finial(B)** and **finial(C)** from **Tube(B)** and **Tube(C).**

3.Put **Tube (A)** onto **Nipple** ,then secure by thread the **Finial(A)**onto the **Tube(A)** and tighten until snug.

4.Make **Shade** two sides holes match **Tube(B)**and **Tube(C)** by thread the **Finial (B)** and **Finial(C)** tighten until snug separately.

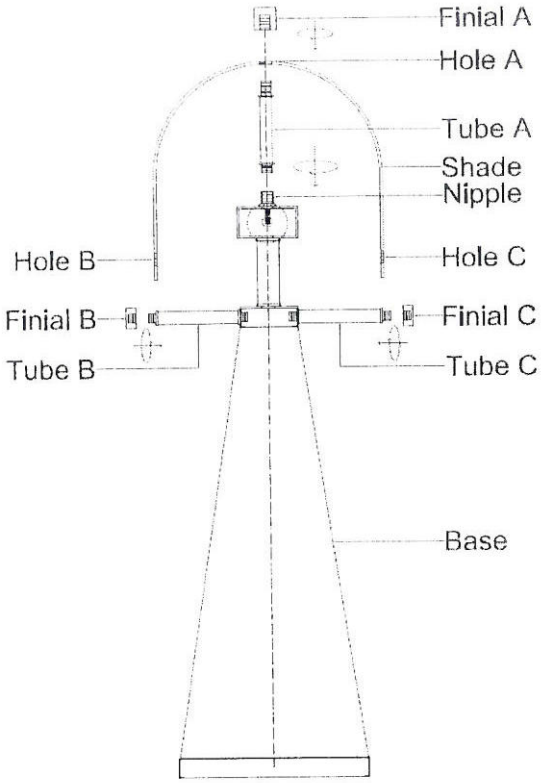

IMPORTANT SAFETY INSTRUCTIONS

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to reduce the risk of electric shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Never use with an extension cord unless plug can be fully inserted. Do not attempt to defeat this safety feature.