
UTTERMOST

ASSEMBLY INSTRUCTIONS

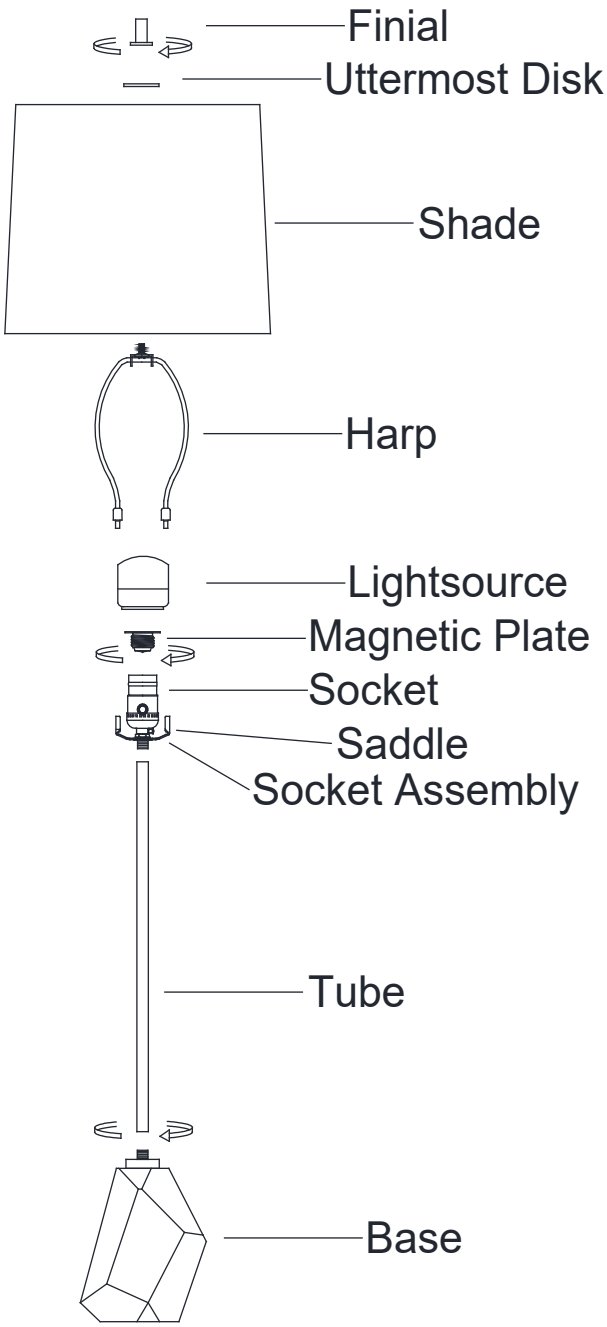

STYLE NO.: 30615-1

CAREFULLY UNPACK ALL PARTS FROM THE CARTON

1. Attach Tube to Base by rotating clockwise until tight.
2. Attach Socket Assembly to Tube by rotating clockwise until tight.
3. Place Harp onto Saddle, and place Uttermost Disk onto the Harp.
4. Place Shade onto Uttermost Disk, then fasten Finial onto Harp to secure Shade
5. Install the Rechargeable LED Lightsource (included) by using the supplied Magnetic Plate.

The included remote control is required to operate the lamp. Before using the Rechargeable LED Lightsource, check that the battery is fully charged. If the lightsource is dim, fully charge the Rechargeable LED Lightsource.
During charging, the indicator will turn red and will turn green after charge is complete.

P.O. Box 5581 3325 Grassy Hill Road | Rocky Mount, VA | 24151