
UTTERMOST

ASSEMBLY INSTRUCTIONS

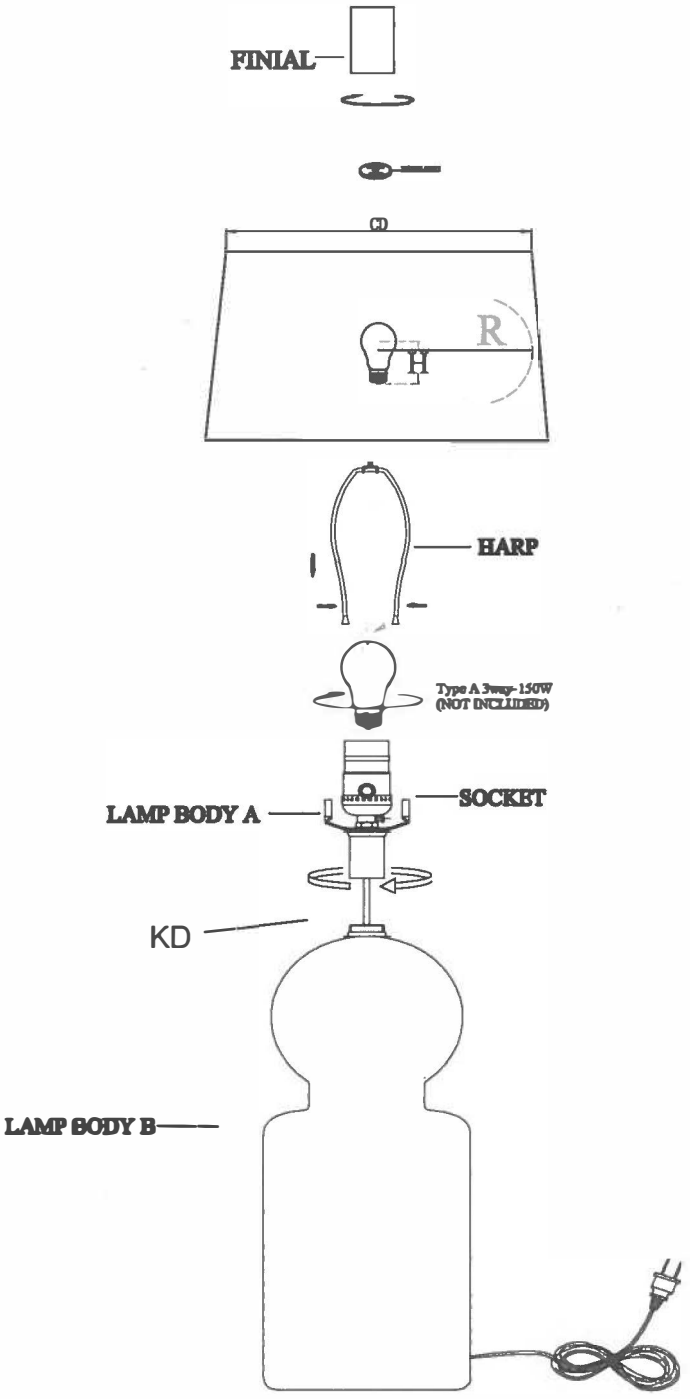

STYLE NO.: 30692-1

1. Take all parts carefully out of the carton and place on a flat, soft surface to prevent any missing or damaged parts.
2. Attach Lamp Body A to Lamp Body B by rotating clockwise until tight.
3. Attach the harp onto the saddle as shown in the diagram.
4. Place the shade and the finial disc onto the top of the harp, then tighten the finial clockwise until secure.

CAUTION: IN ACCORDANCE WITH THE UL REGULATION, THE SHADE SHOULD BE OPEN TOP & OPEN BOTTOM AND "CD" IS BIGGER THAN OR EQUALS TO 4-1/2", "R" IS NOT SMALLER THAN 4-3/4" OR MAY CAUSE FIRE. "H" IS 3¼".

To clean, wipe with soft dry cloth.

NOTE: THE DRAWING OF THE LAMP BODY IS FOR REFERENCE ONLY.

P.O. Box 558 | 3325 Grassy Hill Road | Rocky Mount, VA | 24151